

10 Dallas Court Hallam, Victoria 3803
ABN 27 106 103 315
www.aggdoors.com.au
enquiries@aggdoors.com.au
(03) 8789 1385



Avanti WTX-4

Programming your Remote into the Motor

1. Open the white light cover on the Opener on the ceiling of your garage.
2. Quickly press and release the RED LEARN BUTTON – The LED light will flash slowly.
3. Select which button you wish to use on your remote and quickly press and release your SELECTED REMOTE BUTTON – The Led light will extinguish.
4. Quickly press and release your SELECTED REMOTE BUTTON AGAIN – The LED light will flash quickly.
5. On the next press of the remote the garage door will open.

Note: To code additional remotes, repeat steps 1-5

Clearing the Codes from your Motor

1. Open the white light cover on the Opener on the ceiling of your garage.
2. Quickly press and release the RED LEARN BUTTON – The LED light will flash slowly.
3. Press and hold the BLACK RUN BUTTON – The LED light will flash quickly.
4. All remote codes will be deleted when the LED light stops flashing. When codes have been deleted, refer to step 2 under Code Learning above to re-code remotes.

