



10 Dallas Court Hallam, Victoria 3803 ABN 27 106 103 315 www.aggdoors.com.au enquiries@aggdoors.com.au (03) 8789 1385



Avanti Wireless Keypad

Changing the Combination

Note: The wireless keypad comes with 2 default combinations. Combination

channel 1: 11<

Combination channel 2: 22>

Channel 1:

- 1. Press and hold "O" key, then momentarily press "<" key.
- 2. Release the "O" key.
- 3. Type in the default (or current combination) then press the "<" key.
- 4. Type in the new combination, (up to 8 numbers) then press the "<" key. 5. Retype the new combination then press the "<" key to confirm.

Channel 2:

This procedure is the same as channel 1, except we use the ">" key.

- 1. Press and hold "O" key, then momentarily press ">" key.
- 2. Release the "O" key.
- 3. Type in the default (or current combination) then press the ">" key.
- 4. Type in the new combination, (up to 8 numbers) then press the ">" key.
- 5. Re-type the new combination then press the "" key to confirm.







