

**INDUSTRIAL
ROLLER
DOOR REPAIR**



10 Dallas Court Hallam, Victoria
3803 ABN 27 106 103 315
www.aggdoors.com.au
enquiries@aggdoors.com.au
(03) 8789 1385



Genuine WTB-5

Programming your Remote into the Motor

1. Press and hold the blue door code button, or the SW1 / SW2 button.
2. Press the desired transmitter button for two seconds, then let go.
3. Press down the same transmitter button for two seconds, and then let go. Let go of the Door Code or SW button.

Deleting the Codes from Your Opener

1. Turn off the opener.
2. Press and hold the blue door code button, or the SW1 / SW2 button.
3. Whilst still holding the button down, turn power onto the motor.
4. After 15 seconds, let go and test that your remote no longer operates the motor.

