

10 Dallas Court Hallam, Victoria 3803
ABN 27 106 103 315
www.aggdoors.com.au
enquiries@aggdoors.com.au
(03) 8789 1385



Genuine PCKeypad Wireless Keypad

Programming Guide

To activate the built-in PentaCode® transmitter

1. Enter PIN number and press # button. Green lights come ON for the transmission time.

Change a user's PIN

1. Press * button. Red light ON confirms that the keypad is in User Change mode. 2. Enter ID Number and press # button.

3. Enter old PIN and press # button.

4. Enter new PIN and press # button.

5. Re-enter new PIN and press # button for confirm. Green light comes ON if

PIN
have been changed.

Enter Programming Mode

1. Press ***** button and enter the master code (888888 is the default master code).
2. Press **#** button. One beep, Green light flash once and Red light turns on will confirm that the keypad is in programming mode.
3. Press ***** button or press no button for 60 seconds to exit the programming mode. Red light flashes to confirm the exit.

Change the Master Code

Make sure that the keypad is on programming mode before proceeding to the process

1. Press number **0** button. Orange light confirms that the keypad is in change mode.
2. Enter new code (must be 6 digits long) then press **#** to confirm the code.
3. Re-enter new code and press **#** button. Code has been changed!

Add a User

Make sure that the keypad is on programming mode before proceeding to the process

1. Press number **1** button. Orange light confirms that the keypad is in adding mode.
2. Enter the user ID number (it can be between 1 - 2000) then press **#** button.
3. Enter the PIN number (any 4-8 digits except for 1234 which is reserved) then press **#** button. Green light flash if user have been added.
4. Users can be added continuously without exiting the adding mode. Just repeat steps 2 and 3.
5. If done adding, press **#** and ***** button to exit the mode.

Delete a User

Make sure that the keypad is on programming mode before proceeding to the process

1. Press number **2** button. Orange light confirms that the keypad is in delete mode.
2. Enter user ID number you wish to delete. Press **#** to confirm. Green light flash if user have been deleted.
3. Users can be deleted continuously without exiting the mode. Just repeat step 2.
4. If done deleting, press **#** and ***** to exit the mode.

Delete all User

Make sure that the keypad is on programming mode before proceeding to the process

1. Press number **2** button. Orange light confirms that the keypad is in delete mode.
2. Enter 0000 then press **#** to confirm. Green light flash if all users have been deleted.

Change Transmission Time

Make sure that the keypad is on programming mode before proceeding to the process

1. Press number **4** button. Orange light confirms that the keypad is in change mode.
2. Enter (1 – 90) transmission time you wanted. Default time is 5 sec. Press **#** button to confirm.
3. Press ***** button to exit the mode. Green light flash if time has been changed

