

**INDUSTRIAL
ROLLER
DOOR REPAIR**



10 Dallas Court Hallam, Victoria
3803 ABN 27 106 103 315
www.aggdoors.com.au
enquiries@aggdoors.com.au
(03) 8789 1385



FAAC Fix4 Pilot

Programming of your new remote control:

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the programming button and let it go (ENR, MEMO, PROG, REC... according to the model).
3. The LED light on the receiver illuminates or blinks.
4. Press a button on your new remote control for 1 second.
5. Let the button go. The LED light on the receiver turns off immediately or in the following 10 seconds according to the model.
6. Your new remote control is programmed.

Deleting the Codes from your Opener

1. Press down the programming button for too long. It will erase the programming code of all the remote controls that have already been programmed.

