

10 Dallas Court Hallam, Victoria
3803 ABN 27 106 103 315
www.aggdoors.com.au
enquiries@aggdoors.com.au
(03) 8789 1385



Seip 40-AM

Remote-to-remote programming:

1. Open the casing of your already-programmed remote.
2. You will see a row of small programmable numbered switches. They are in the ON or OFF position.
3. Open the casing of your new remote.
4. You will see a row of small programmable numbered switches.
5. Set them in the same way as those set in your already-programmed remote.
6. Your new remote control is programmed.

Receiver-based programming:

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, you will see a row of small programmable switches. They are in the ON or OFF position.
3. Open the casing of your new remote.
4. You will see a row of small programmable numbered switches.
5. Set them in the same way as those set in the receiver.
6. Your new remote control is programmed.

