

10 Dallas Court Hallam, Victoria
3803 ABN 27 106 103 315
www.aggdoors.com.au
enquiries@aggdoors.com.au
(03) 8789 1385



Coding Your Remotes into Your Opener

1. Open cover of motor. For some motors you may need to remove a screw to allow it to open.
2. Press the RED push button on the circuit board.
3. Press and hold the desired button on the new remote control for two seconds, or until the LED stops flashing.

Deleting the Codes from Your Opener

1. Open cover of motor. For some motors you may need to remove a screw to allow it to open.
2. Push and hold the RED push button on the circuit board for ten seconds
3. After a few seconds the light will begin to blink and after ten seconds it will remain solid.
4. After the LED goes solid, release the button.
5. Test remote to make sure codes have been deleted.

