



10 Dallas Court Hallam, Victoria 3803 ABN 27 106 103 315 www.aggdoors.com.au enquiries@aggdoors.com.au (03) 8789 1385



Genuine SE40TX

Remote-to-remote programming:

- 1. Open the casing of your already-programmed remote.
- 2. You will see a row of small programmable numbered switches. They are in the ON or OFF position.
- 3. Open the casing of your new remote.
- 4. You will see a row of small programmable numbered switches.
- 5. Set them in the same way as those set in your already-programmed remote.
- 6. Your new remote control is programmed.

Receiver-based programming:

- 1. Open the casing of your receiver. It is located next to your motor.
- 2. On the receiver circuit board, you will see a row of small programmable switches. They are in the ON or OFF position.
- 3. Open the casing of your new remote.
- 4. You will see a row of small programmable numbered switches.
- 5. Set them in the same way as those set in the receiver.
- 6. Your new remote control is programmed.







