



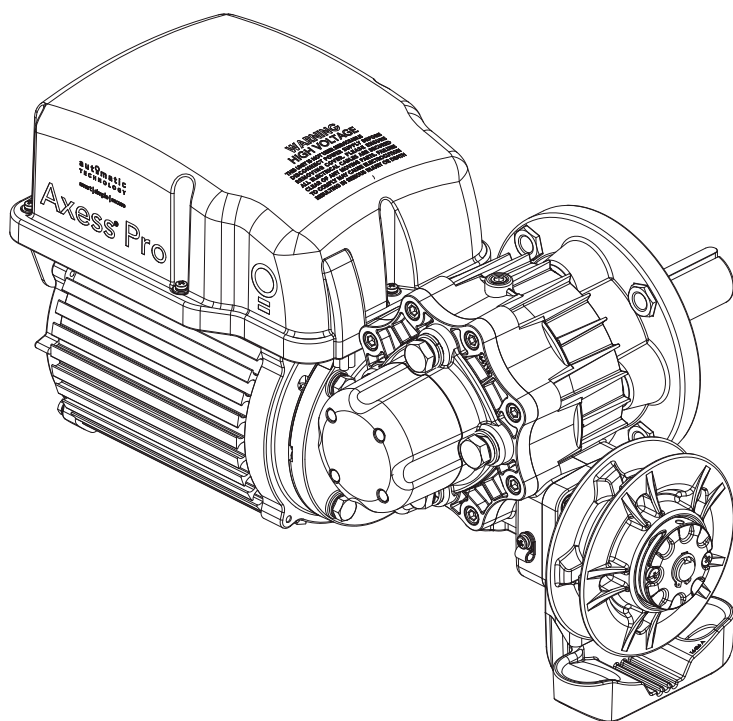

Axess® Pro Series 3000

Industrial Roller Shutter Opener

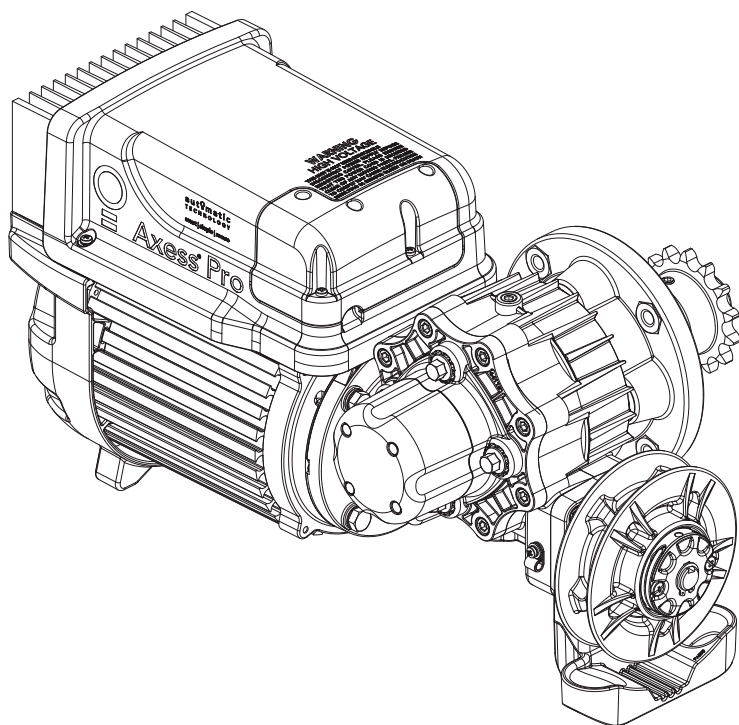

Featuring **TrioCode™ 128** Technology

automatic
TECHNOLOGY



WARNING: Electrical wiring must be in compliance with your local building and electrical codes.

WARNING: It is vital for the safety of persons to follow all instructions. Failure to comply with the installation instructions and the safety warnings may result in serious personal injury and/or property and remote control opener damage. Please save these instructions for future reference.

NOTE: For full automatic operation a Safety Beam (Photo Electric Beam Sensor) must be fitted to the logic console with this opener. Failure to comply will void the warranty and may cause serious personal injury and/or property damage.

Automatic Technology (Australia) Pty Ltd to the extent that such may be lawfully excluded hereby expressly disclaims all conditions or warranties, statutory or otherwise which may be implied by laws as conditions or warranties of purchase of an Automatic Technology (Australia) Pty Ltd industrial roller shutter opener. Automatic Technology (Australia) Pty Ltd hereby further expressly excludes all or any liability for any injury, damage, cost, expense or claim whatsoever suffered by any person as a result whether directly or indirectly from failure to install the Automatic Technology (Australia) industrial roller shutter opener in accordance with these installation instructions.

1. Axess® Pro Series 3000 Contents

1-Phase 240Vac and 3-Phase 415Vac Industrial Roller Shutter Opener

1. Axess® Pro Series 3000 Contents	3	15. Auto-Close Mode for V1 Console	18
2. Important Safety Instructions	4	15.1 Safety Close Mode	18
3. Controller Input And Outputs	6	15.2 Setting Up Standard Auto-Close Mode	18
4. Operating Controls	7	15.3 Safety Beam Triggered Auto Close	18
5. Set up Requirements	8	15.4 Pedestrian Auto-Close	18
5.1 Kit Contents	8	15.5 Auto-Close After Obstruction:	18
5.2 Choosing your Set up	8	16. Auto-Close Mode for V2 Console	19
6. Pre-Installation Requirements	9	16.1 Safety Close Mode	19
6.1 Initial Check	9	16.2 Setting Up Standard Auto-Close Mode	19
6.2 Selecting the installation location	9	16.3 Safety Beam Triggered Auto Close	19
6.3 Drive Unit Pre-assembly	9	16.4 Pedestrian Auto-Close	19
7. Installation	10	16.5 Auto-Close After Obstruction:	19
7.1 Mounting The Drive Unit	10	17. Time Clock	20
7.2 Installing The Logic Or Manual Console	10	17.1 Time Clock Operation	20
8. Programming The Opener	11	17.2 Time Clock Settings	20
9. Safety Beam Installation	12	17.3 Day Light Saving Time Adjustment	21
9.1 Fitting the Safety Beam	12	18. Accessories Installation	21
9.2 Wiring the Safety Beam to V1 Logic Console	12	19. Specifications	22
9.3 Wiring the Safety Beam to V2 Logic Console	13	20. Troubleshooting	23
9.4 Alignment	13	21. Maintenance	24
10. Setting Limits via Console	14	21.1 Shutter Maintenance	24
10.1 Setting Travel Limits With Manual Console	14	21.2 Lubrication (every 3 - 6 months)	24
10.2 Clearing Travel Limits With Manual Console	14	21.3 Shutter Service and Repair	24
10.3 Setting Travel Limits with Logic Console	14	21.4 Opener Maintenance	24
11. Setting Limits via Transmitter	15	21.5 Service Indicator	24
11.1 Code A Transmitter For Limit Setting	15	22. Appendix	25
11.2 Storing Transmitter Code	15	A - Console Menu Structure	25
11.3 Navigating To "Set Door Travel Menu"	15	B - Viewing & Editing Logic Console Parameters	28
11.4 Setting Limits Via Transmitter	15	C - Control Board Adjustments	29
11.5 To Recalculate Travel Times	15	D - Diagnostic Tools	31
12. Coding Transmitter	16	E - Memory Tools	32
12.1 Coding Transmitter Button	16	F - Transmitter Editing	33
12.2 Selecting Function Of The Button	16	G - Transmitter Management	35
12.3 Returning To Main Screen	16	Warranty and Exclusion of Liability	36
13. Remotely Coding Transmitters	16		
13.1 Selecting The Function To Be Coded	16		
13.2 Activate Remote Code Set Mode	17		
14. Setting Pedestrian Position	17		
14.1 Setting Pedestrian Position	17		
14.2 Checking Pedestrian Position	17		
14.3 Error Displays	17		
13.3 Removing the Battery From the Transmitter	17		

2. Important Safety Instructions

The safety alert symbols below indicate a personal safety or property damage instruction exists. **READ THESE INSTRUCTIONS CAREFULLY.**

This automatic shutter opener is designed and tested to offer safe service provided it is installed and operated in strict accordance with the following safety rules. Failure to comply with the following instructions may result in death, serious personal injury or property damage.



WARNING!

- The shutter may operate unexpectedly, therefore do not allow anything to stay in the path of the door.
- For **Safety** protection, a Safety Beam **must** be fitted with logic console. Failure to comply will void the warranty and may result in serious personal injury and/or property damage .
- The drive must not be used with a shutter incorporating a wicket door, unless the drive cannot be operated with the wicket door open.
- The drive is intended to be installed at least 2.5m above the floor.
- **DO NOT** allow children to operate the opener. Any device that can operate the opener, make sure it is out of reach of children and that the doorway is in full view at all times. Serious personal injury and/or property damage can result from failure to follow this warning.
- When using auto close mode, a **Safety** (Photo Electric) **Beam** must be fitted correctly and tested for operation at regular intervals. **Extreme caution** is recommended when using auto close mode. **All safety rules** must be followed.



ELECTROCUTION!

- Place opener in protected area so that it does not get wet.
- Do not spray with water .
- **Disconnect the power cord** from mains power before making any repairs or removing covers. Only **experienced** service personnel should remove covers from the opener.
- If the power supply cord is damaged, it **must** be replaced by an Automatic Technology service agent or suitably qualified person.
- Electrical wiring must be compliance with the local building an electrical codes.

2. Important Safety Instructions



CAUTION:

Emergency access

Entrapment under
operating door

Installation

Security

Entanglement in
moving door

- If your facility has no pedestrian entrance door, an emergency access device should be installed.
- **DO NOT** operate the opener unless the shutter is in full view and free from objects such as cars and children/people. Make sure that the shutter has finished moving before entering or leaving the premises.
- Do not allow children to play with shutter controls or transmitters.
- Ensure the shutter is in good working order by undertaking regular servicing.
- For **ADDITIONAL SAFETY** protection we **STRONGLY** recommend the fitting of a Safety (Photo Electric) Beam.
- Safety beams must be installed if the closing force at the bottom edge of the door exceeds 400N (40kg)
- Frequently examine the installation, in particular, springs and mountings for signs of wear, damage or imbalance. **DO NOT** use if repair or adjustment is needed since a fault in the installation or an incorrectly balanced shutter may cause injury. **DO NOT** attempt to repair the shutter yourself as hardware is under extreme tension.
- The shutter must be well balanced and in good working order. Shutter springs, brackets and their hardware are under extreme tension and can cause serious personal injury. Do not attempt to adjust them. A faulty shutter must be repaired by a industrial roller shutter professional prior to opener installation.
- **Remove or disengage** all shutter locks and mechanisms prior to installation of the opener.
- Ensure no parts of the shutter or installation extend over public paths or roads.
- After installation a full function **test of the system** and safety devices **must** be done.
- Make sure the shutter is fully closed before leaving the driveway. .
- Keep hands and loose clothing clear of shutter and opener at all times.



3. Controller Input And Outputs

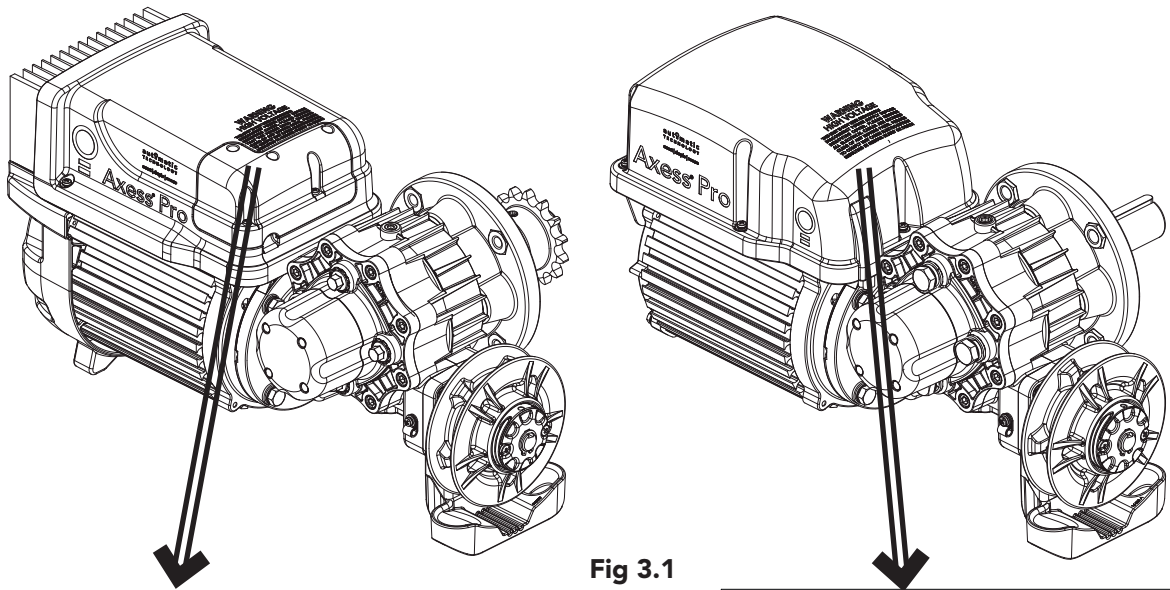


Fig 3.1

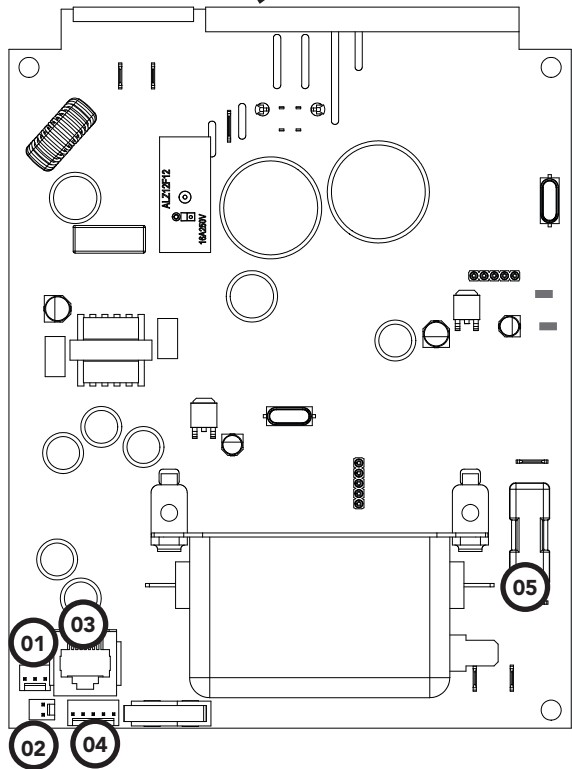


Fig 3.2 - AX3105 & AX3110

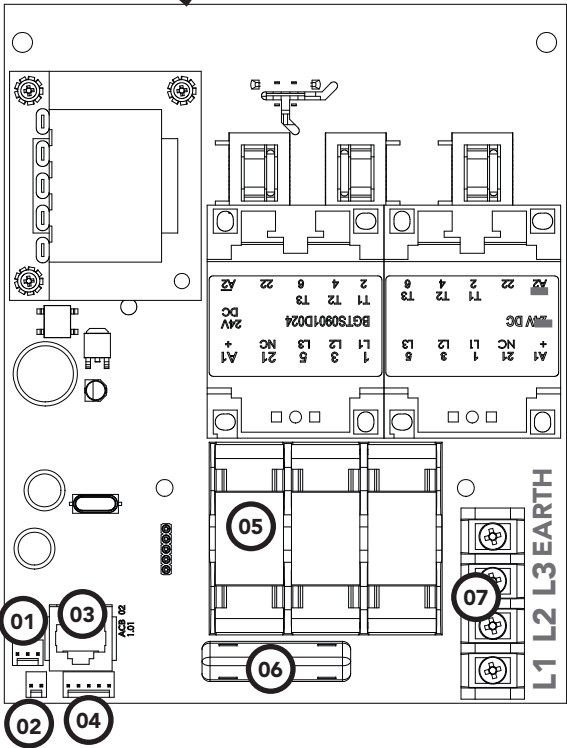


Fig 3.3 - AX3305, AX3310 & AX3315

- 01 Motor identification harness connector
- 02 Clutch interlock microswitch connector
- 03 Serial interface connector
- 04 Position sensor connector
- 05 10 Amps slow blow mains fuse

- 01 Motor identification harness connector
- 02 Clutch interlock microswitch connector
- 03 Serial interface connector
- 04 Position sensor connector
- 05 FLQ10 - 500Vac time delayed fuse x 3
- 06 TDC11- 250mA 1000Vac slow blow fuse
- 07 3-phase 415Vac mains input terminal



4. Operating Controls

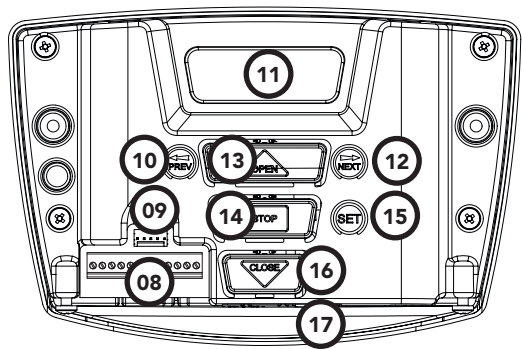


Fig 4.1 - Logic Console

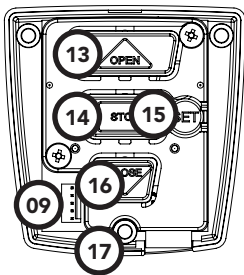


Fig 4.2 - Manual Console

08 Terminal Block (From Left To Right)

V1 Console:

- V+** Three Wire Safety Beams " + " Supply
- IN3** Three Wire Safety Beams Trigger Input
- V-** Common For Two Wire Safety Beam and Three Wire Safety Beams
- IN2** Two Wire Safety Beam Input
- AUX OUT** Receiver's Auxiliary Output
- FIRE** Input Terminal (N/O or N/C)
- GPI N/O** Input Terminal (N/O)
- OPN** Input Terminal (N/O or N/C)
- STP** Input Terminal (N/O or N/C)
- CLS** Input Terminal (N/O)
- SWP** Input Terminal (N/O)
- COM** Terminal For Inputs

V2 Console:

- AUX OUT** Receiver's Auxiliary Output
- V+** Accessory Supply
- SB3** Third Safety Beam Input
- SB2** Second Safety Beam Input
- SB1** First Safety Beam Input
- 0V** Common For Safety Beams
- 0V** Common Terminal For Control Inputs
- FIRE** N/O , N/C Input Terminal
- GPI** N/O Input Terminal
- OPN** N/O , N/C Input Terminal
- STP** N/O , N/C Input Terminal
- CLS** N/O Input Terminal

09 Programmer PG-3 Input

10 Console Previous Button

11 Liquid Crystal Display

12 Console Next Button

13 Console Open Button

14 Console Stop Button

15 Console Set Button

16 Console Close Button

17 RJ45 Connector



5. Set up Requirements

5.1 Kit Contents

ITEM	DESCRIPTION	MODEL
1	AXESS 3100 POWER DRIVE UNIT (Single Phase Power)	AX3105
	AXESS 3300 POWER DRIVE UNIT (Three Phase Power)	AX3305
		AX3310 AX3315

ITEM	DESCRIPTION	QTY	ORDER CODE
2	COMMUNICATION CABLE	1	61909
3	TIMING ASSEMBLY	1	61868
4	MOUNTING FLANGE	1	18026
5	OUTPUT DRIVE SHAFT ASSEMBLY	1	64536
6	SPROCKET 14T (0.625")	1	64703
7	CHAIN 10B (0.625')	1	63026

AX30 FASTENER PACK (61703)

8	HEX BOLT DW M8 X 20 AND WASHERS	4	10116
9	HEX HEAD SCREW M8 X 38 AND WASHER	4	10105
10	HEX HEAD SCREW ZP (M12 X 35) AND WASHERS	4	10068
11	LOCK NUT KM6	1	10935
12	LOCKING WASHER MB6	1	10985

AUTOMATED FULL LOGIC SET UP

13	LOGIC CONSOLE	1	18050
14	TRICODE™128 KEYRING TRANSMITTERS	2	61160
15	SAFETY BEAMS WITH WIRES AND BRACKETS	1	61903

DEAD MAN SET UP

16	MANUAL CONSOLE	1	18051
----	----------------	---	-------

5.2 Choosing your Set up

The Axxess Pro 3000 can be set up in two ways and therefore may require additional items. Set ups are as follows;

Set Up	Items Required
Dead Man Set Up	Drive Unit, Manual Console
Automated Full Logic Set Up with Safety Beams	Drive Unit, Logic Console, transmitter and safety beams.




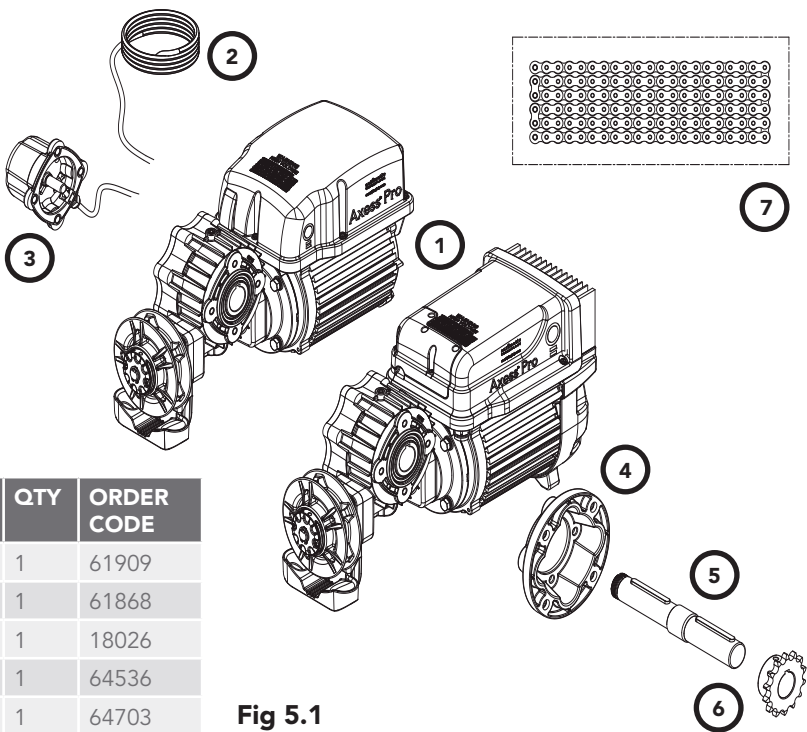


Fig 5.1

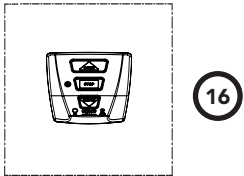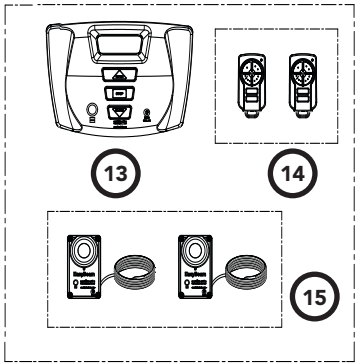

6. Pre-Installation Requirements

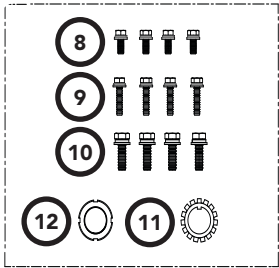

IMPORTANT SAFETY INSTRUCTIONS FOR INSTALLATION
Warning: Incorrect installation can lead to severe injury.
Follow ALL installation instructions.

Fig 6.1

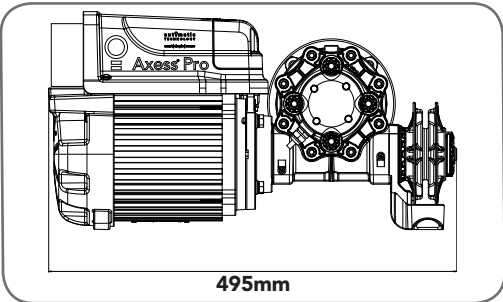


Fig 6.2

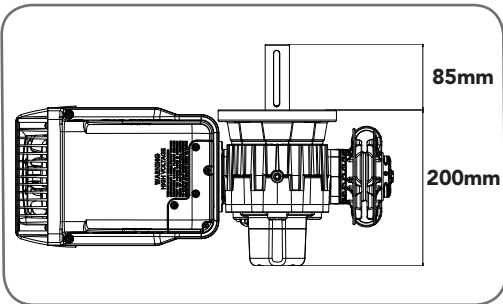


Fig 6.3


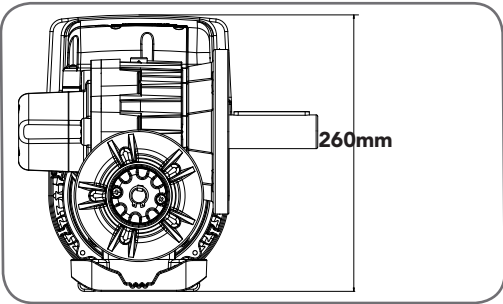


Fig 6.4

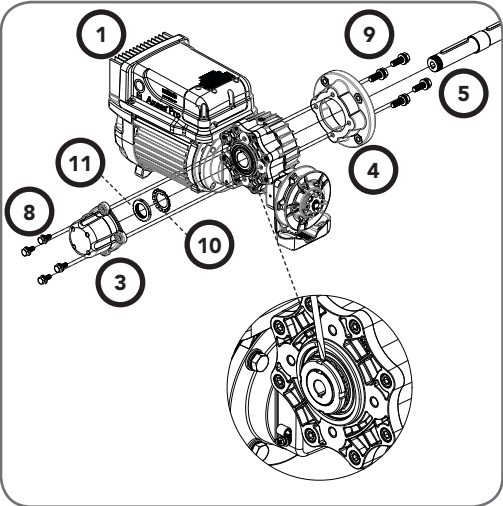

The Axess® Pro Series 3000 is designed to operate most industrial heavy duty roller shutters. The shutter must be in good working condition and travel freely in the guides.

6.1 Initial Check

Before commencing installation, check the following:

- a. The shutter moves freely for the full travel in both directions.
- b. The mounting must be a solid construction (concrete, brick or steel) and must be able to withstand the full driving force applied to the shutter.
- c. For full automatic operation a Safety Beam must be fitted to the logic console. The Safety Beam should be positioned as close to the shutter as practicable.

SINGLE PHASE (3105 & 3110 models): Require a 240V 10 Amp power point located within one metre of the drive unit.

6.2 Selecting the installation location

Overall dimensions of the opener are shown in **Fig. 6.1 - 6.3**.

When selecting the installation location, consider the following:

- Minimum distance between the shutter drum and mounting plate needs to be more than 15mm and less than 100mm.
- Minimum distance between the drive unit and the imposing structure is 10mm.
- The overhead clearance needs to be at least 150mm.

6.3 Drive Unit Pre-assembly

The opener can be installed on either the right- or left hand side of the shutter (when viewed from inside the building). The timing assembly, mounting flange and drive shaft needs to be assembled according to the installation side. Assembling the opener for **RIGHT-HAND** installation is listed below and shown in **Fig 6.4**. For **LEFT-HAND** side installation, assemble the parts from the other end.

- a. Assemble the mounting flange (4) with four M8x38 screws (9) to the drive unit (1).
- b. Insert the output drive shaft (5) into the gearbox, thread side first.
- c. Secure the output drive shaft with the lock washer (11) and lock nut (12).
- d. Finger tighten the lock nut* (12) then lock it by securing the position of the lock nut by bending one tooth of the lock washer (11) into the slot on the lock nut. **(Fig 6.4 insert)**
- e. Line up the shaft of the timing assembly (3) with the keyway on the back of the drive shaft. Push and secure the timing assembly with four M8x20 bolts (8) ensuring the cable gland is facing the motor.

NOTE: The drive unit is not designed to be mounted upside down. Gearbox damage will result.

* Finger tighten the lock nut, this will remove any movement in the output shaft. Excessive tightening to lock nut may cause damage to output shaft bearing.



7. Installation

7.1 Mounting The Drive Unit

Open the shutter about one metre from the floor.
Raise the drive unit to the required height by using a suitable lifter or use chain block connected to a secure beam above the shutter axle.

- Position opener and secure with four M12x35 screws ⑩.
- Mount drive sprocket ⑥ on shaft ⑤ in line with shutter drive gear. Tighten the grub screw on the sprocket ⑥ with M4 hex key.
- Shorten drive chain ⑦ as required and fit around drive gears.
- Feed manual chain (not supplied) through guide and over the clutch pulley.
- Shorten the manual chain as required and fix ends to make a loop.

NOTE: Ensure that hand chain is not twisted when making a loop.



WARNING! Do not turn the power on to the opener before connecting either console.

7.2 Installing The Logic Or Manual Console

- Remove the main cover.
- Affix the logic or manual console at a height of 1.5 metres within sight of the shutter. Make sure that the position of the logic or manual console is out of reach of children and convenient to the customer (**Fig. 7.1**).
- Connect the communication cable ② from the opener to the logic or manual console unit.



WARNING! For full automatic operation a Photo Electric Beam Sensor (Safety Beam) must be fitted with logic console. Failure to comply will void the warranty and may cause serious personal injury and/or property damage.



WARNING! Ensure that network cable is affixed properly and away from the moving parts of the shutter and opener.

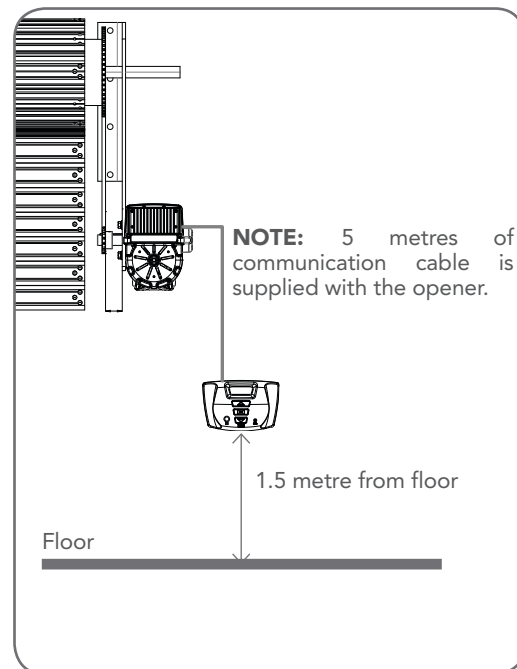


Fig 7.1



WARNING! Do not turn the power on to the opener before connecting either console.

8. Programming The Opener

The most common programs are;

Program	Menu's required	Function	Section
Dead Man Set Up	Manual Console	Setting the Limits	10.1
Automated Full Logic Set Up with Safety Beams	Menu 10.1	Setting the Limits	11.1 or 12.4
	Menu 1	Coding the Transmitter	13.1
	Menu 6.1	Safety Close Mode	16.1
	Menu 3	Auto Close Times	16.2 to 16.5

For the Dead Man Set Up the shutter can not be closed by Auto-Close or by transmitters. When Safety Beams are not installed, the controller will display the following message;



ATTENTION! No Safety Beams have been detected. "Safety Close' mode has been turned on. See Manual for details. Press SET to continue.

NOTE: Fitting Safety Beams enables the Auto-Close feature to become active.

9. Safety Beam Installation

Safety Beams

Safety Beams extend across the doorway opening. The Safety Beam is designed to detect an obstruction while the shutter is closing and to send a signal to the opener to reverse or stop the shutter movement.

9.1 Fitting the Safety Beam

- a. Attach the mounting bracket (4) to the adjustment bracket (3) with the pan head screw (6). (Fig. 6.1)
- b. Attach the bracket (2) to the Safety Beam transmitter with four tapite screws (m3x5) (7) and attach the other side to the adjustment bracket (3) with the pan head screw (6).
- c. Repeat steps a and b to assemble the Safety Beam receiver.



CAUTION: Locate the Safety Beam in a strategic location in the doorway. Automatic Technology recommend that the sensor is placed 100mm above the floor level and as close as possible to the door opening.

9.2 Wiring the Safety Beam to V1 Logic Console

- a. Connect the wires from the Safety Beams wiring harness to terminal block.
 - i. By default the Axess® Pro Series 3000 will take two wire safety beams (connect one wire to IN2 input and the second wire to V-, next to the IN2 terminal (Fig. 6.2)).
 - ii. The V1 Console will only take 2 wire safety beams or 3 wire beams not a combination of both.
- b. For three wire beams connect the Resistor 5k6 ohms (Green Blue Red Gold) (5) to number 2 (two) and 4 (four) terminal on the Safety-2 receiver (Fig. 6.3). Make sure to align the beams correctly. Follow the manual supplied with the Safety Beams.
- c. Ensure you program the Axess® Pro Series 3000 to identify what type of Safety Beam or combination of Safety Beams you have installed.
 - i. Press NEXT to Navigate to Menu 6
 - ii. Press SET to display Menu 6.4 (for IN3).
 - iii. Use the UP and DOWN arrows to change the Safety Beam type from two to three wires.
 - iv. Press SET to accept the selection.

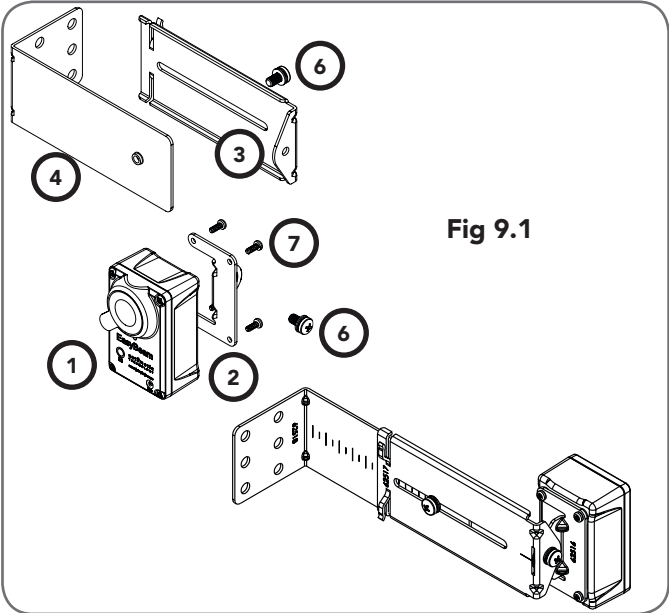


Fig 9.1



WARNING: When using Safety Beams, the doorway must be clear of all obstructions and persons at all times. The location of the beams and manner in which it is installed might not give safety protection at all times. Check to make sure that the height of the beam and type used give maximum protection possible



WARNING: Tampering with Safety Beams could result in serious personal injury and/or property damage and will void the warranty.

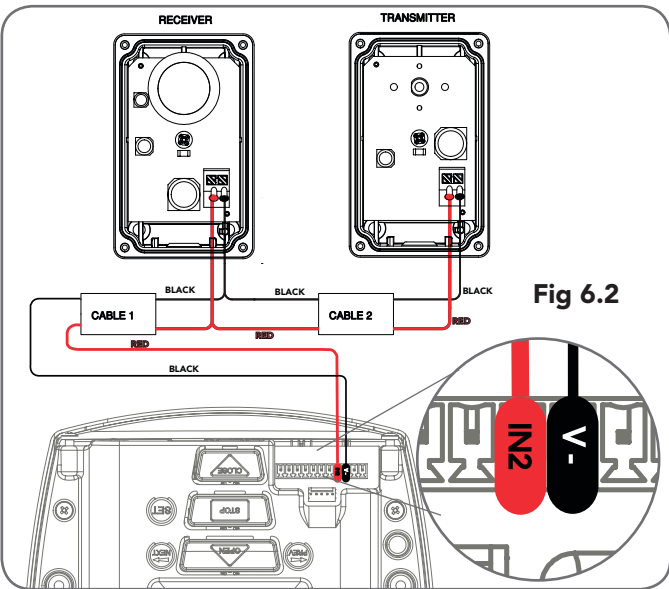


Fig 6.2

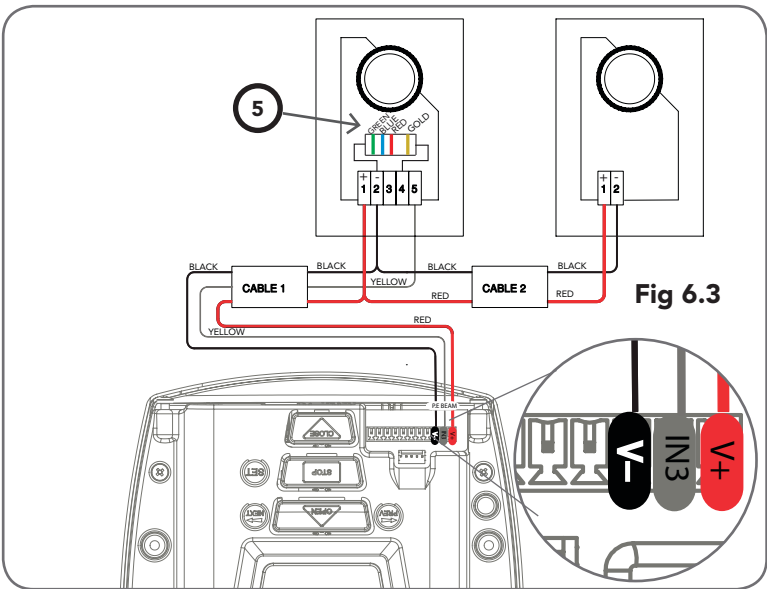


Fig 6.3



9. Safety Beam Installation

9.3 Wiring the Safety Beam to V2 Logic Console

- a. Connect the wires from the Safety Beams wiring harness to terminal block.
 - i. By default the Axess® Pro Series 3000 will only take two wire safety beams (connect one wire to SB3, SB2 or SB1 input and the second wire to 0V, next to the SB1 terminal (**Fig. 9.4**)).
 - ii. The V2 Console can take up to three (3) two wire safety beams but is NOT compatible with three wire safety beams.
- b. Make sure to align the beams correctly. Follow the manual supplied with the Safety Beams.




WARNING: When using Safety Beams, the doorway must be clear of all obstructions and persons at all times. The location of the beams and manner in which it is installed might not give safety protection at all times. Check to make sure that the height of the beam and type used give maximum protection possible



WARNING: Tampering with Safety Beams could result in serious personal injury and/or property damage and will void the warranty.

9.4 Alignment

- a. Power up the Axess® Pro Series 3000 with the Safety Beam connected. The green LED on the transmitter should turn ON to indicate power is present.
- b. If the receiver is connected to power and the red LED is flashing while the green LED on the transmitter is on, the transmitter and receiver are not aligned.
- c. Make horizontal and/or vertical adjustment on the transmitter and/or receiver until the red LED on the receiver turns on, indicating alignment. Approaching to the alignment is indicated by fast flashes on the red receiver LED.

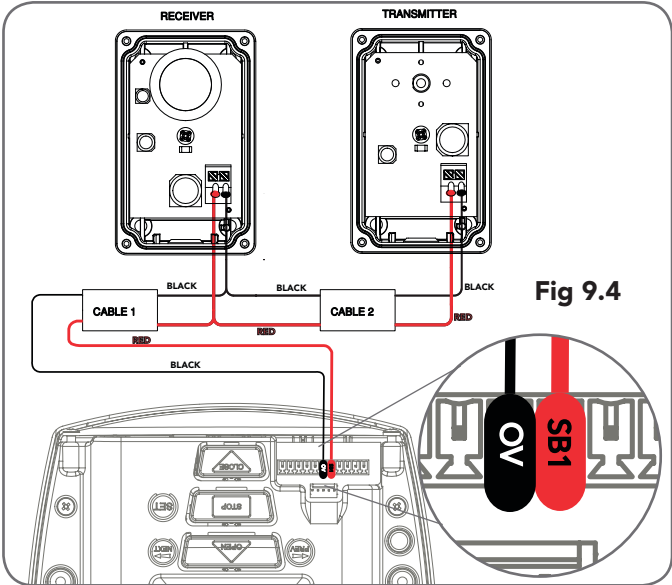

10. Setting Limits via Console

The manual console has open, close, stop and set push buttons. The status of the door is indicated by the LED lights. The manual console only supports Safety Close mode. In this mode, the user must press and hold the close button to close the door. The door can be opened by pressing the open button once.

10.1 Setting Travel Limits With Manual Console

- Turn on the power to the opener. After a short delay blue close LED will start to flash.
- Press and hold the CLOSE button (**Fig. 10.1**) - the shutter should start closing.
 - If the shutter opens, release the CLOSE button and press the STOP button once to change the motor's direction. Press and hold the CLOSE button until close position of the shutter is reached.
 - If the shutter overshoots, press the OPEN button to move the shutter in the open direction.
- When the shutter is at the desired close position, press the SET button to record the close limit position. The green open LED will start to flash.
- Press and hold the OPEN button (**Fig. 10.2**) to open the shutter. When the shutter is at the desired open position, release the OPEN button
 - If the shutter overshoots, press the CLOSE button to move the shutter in the CLOSE direction.



WARNING! Once the next step is performed, the shutter will automatically close and open to calculate travel time settings. Keep persons and objects clear of the shutter.

- Press the SET button to store the open limit. The shutter will now automatically close and open to calculate the travel time settings.
- Replace the main cover. The opener can now be operated with the OPEN or CLOSE buttons on the manual console.

10.2 Clearing Travel Limits With Manual Console

- Turn power to the opener off.
- Press and hold the SET Button.
- Turn power on while holding the SET button. Continue to hold until all LED's are off.
- Repeat 10.1 to set travel limit positions.

10.3 Setting Travel Limits with Logic Console

- Turn on the power to the opener. The controller will go through a start up sequence.
- After a short delay the MAIN SCREEN (**Fig. 11.1**) will be displayed. If this is the first time the Axess® Pro Series 3000 is being used, the MAIN SCREEN should enter into limit set mode and the blue close LED will be flashing. If the display shows that an input is active, then rectify the situation before continuing with the procedure for setting the travel limits. Press and hold the CLOSE button - the shutter should start closing.
 - If the shutter opens, release the CLOSE button and press the STOP button once to change the motor's direction. Press and hold the CLOSE button until close position of the shutter is reached.
 - If the shutter overshoots, press the OPEN button to move the shutter in the open direction.

- When the shutter is at the desired close position, press the SET button to record the close limit position. The display will change and the green open LED will start to flash (**Fig. 11.2**).
- Press and hold the OPEN button to open the shutter. When the shutter is at the desired open position, release the OPEN button
 - If the shutter overshoots, press the CLOSE button to move the shutter in the CLOSE direction.



WARNING! Once the next step is performed, the shutter will automatically close and open to calculate travel time settings. Keep persons and objects clear of the shutter.

- Press the SET button to store the open limit. The shutter will now automatically close and open to calculate the travel time settings. After this, If PE Beams are installed, the opener can be operated with the OPEN or CLOSE button on the logic console or from the transmitter. Otherwise, the controller will be loaded with "Safety Close Mode". (Section 16.1)

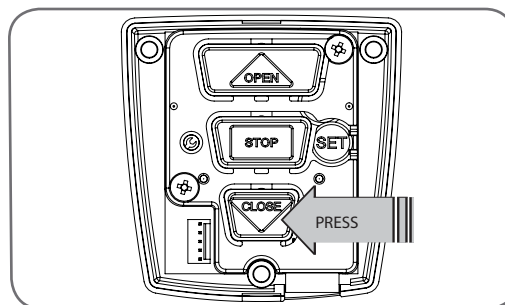


Fig 10.1

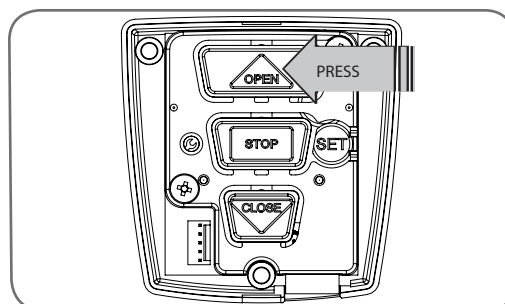


Fig 10.2

NOTE: Safety (Photo Electric) Beams, transmitters or any other device to control the operation of the shutter is not supported by the manual console.

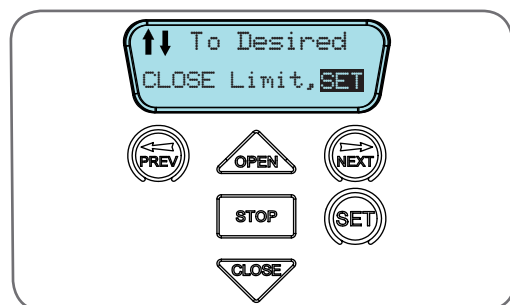


Fig 10.3

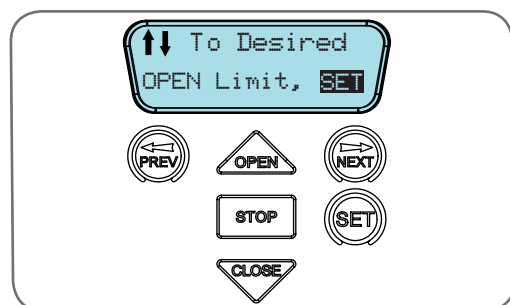


Fig 10.4

11. Setting Limits via Transmitter

In order to use a transmitter to set the limits, it must first have at least one of its buttons coded to the logic console. The function assigned to the transmitter's buttons is of no concern here as the buttons are temporally assigned to OPEN, CLOSE and SET (Fig. 11.2).

11.1 Code A Transmitter For Limit Setting

- Press NEXT to navigate to Menu 1.
- Press SET to enter the code set procedure (Fig. 11.1).

11.2 Storing Transmitter Code

- The logic console will prompt to press one of the transmitter's button.
- Press the transmitter button you wish to use to operate the opener (e.g. button 1).
- Press the same transmitter button again as prompted by the display.
- Press the SET button to store the transmitter.

11.3 Navigating To "Set Door Travel Menu"

- Press PREV to navigate to Menu 10.
- Press SET to display MENU 10.1.
- Press SET two times to enter the limit setting procedure. The close blue LED will start to flash.

11.4 Setting Limits Via Transmitter

- Press and hold Button 4 on the transmitter to close the shutter.
 - If the shutter opens, release button 4 and press the STOP button once on the logic console to change the direction of the motor. Then press and hold Button 4 on the transmitter to close the shutter.
 - If the shutter is closed too far, press Button 1 to "inch" the shutter towards open.
- When happy with the close limit position, press Button 2 to store this in the memory. The open green LED will start to flash. Press Button 1 to open the shutter.
 - If the shutter is opened too far, press Button 4 to "inch" the shutter closed.

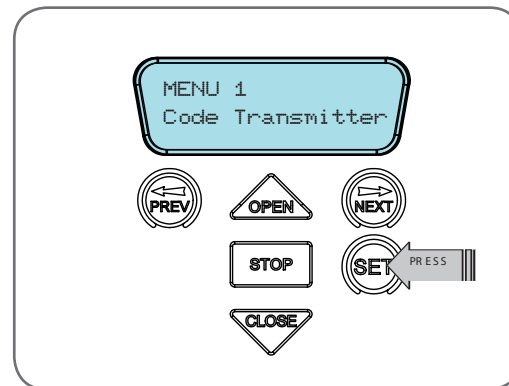


Fig 11.1

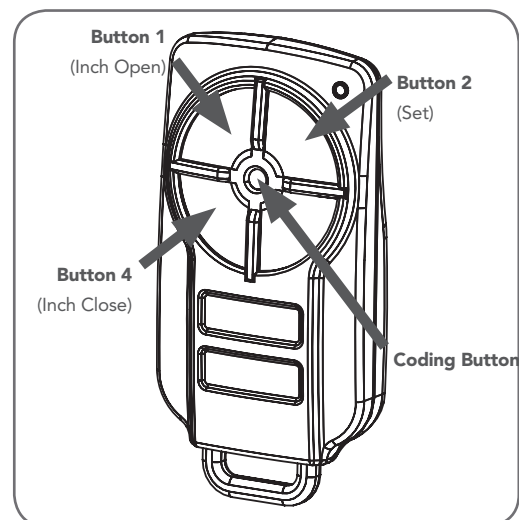


Fig 11.2



WARNING: The shutter will automatically close and open once the next step is performed. Ensure that no persons or objects are in the path of the shutter.

IMPORTANT NOTE:

Only TrioCode™128 Technology Transmitters are compatible with the Axess® Pro Series 3000 products.

- When you are happy with the open limit position, press Button 2 on the transmitter to store into memory. The shutter will now automatically close and open to calculate the travel times and other settings.
- After this, if PE Beams are installed, then the opener can be operated with the OPEN or CLOSE button on the logic console or from the transmitter. Otherwise, the controller will be loaded with "Safety Close Mode". (Section 16.1)

11.5 To Recalculate Travel Times

Reprofiling is a simplified way of re-learning the travel characteristic of a previously setup Limit Switch travel installation. Re-profiling can be used when the travel characteristics of the shutter change due to mechanical adjustments etc.

- To initiate a re-profile, locate "MENU 10.2 Reprofile Travel"
- Press SET and follow the prompts.

The shutter will start to move and re-calculate force margins. The shutter can move between the open and close limit positions up to two (2) times (depending on the position of the shutter and the power up condition). A single beep will be heard once the process is complete.

12. Coding Transmitter

IMPORTANT NOTE:
Only TrioCode™128 Technology Transmitters are compatible with the Axess® Pro Series 3000 products.

Fig 12.1

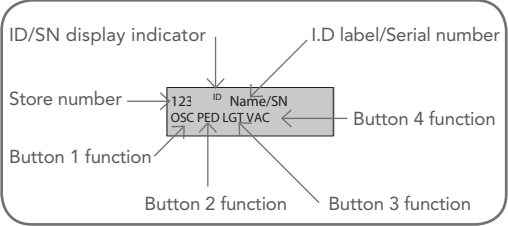


Fig 12.2

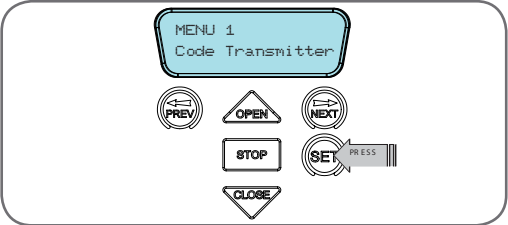


Fig 12.3


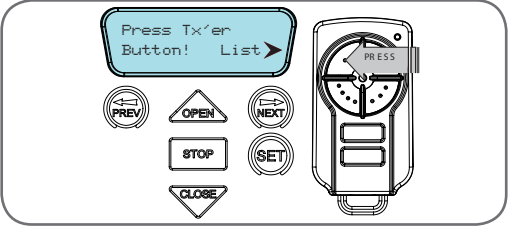


Fig 12.4

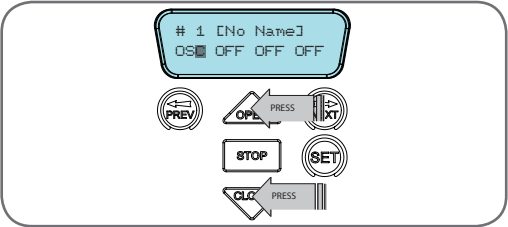

The Axess® Pro Series 3000 can store 511 transmitters in its memory. Each transmitter can be allocated an alpha-numeric ID label up to eleven characters in length and each button can be assigned to one of several control functions. The settings for a transmitter are represented in **Fig. 12.1**. It shows the transmitter's store number, ID label or serial number and the functions assigned to each of the four buttons. To toggle between ID/SN display, press UP/DOWN with the cursor on the ID/SN indicator. The procedures below code, delete, replace, edit and copy transmitter records.

12.1 Coding Transmitter Button

Navigating To Menu 1 "Code Transmitter"

- Press NEXT to navigate to Menu 1 (**Fig. 12.2**).
- Press SET to enter the code set procedure.

Storing Transmitter Code

- The logic console will prompt to press one of the transmitter's buttons.
- Press the transmitter button you wish to use to operate the opener (e.g. button 1) (**Fig. 12.3**).
- Press the same transmitter button again as prompted by the display.

12.2 Selecting Function Of The Button

The logic console will now show the transmitter's record, with a cursor on the field for the button being coded (**Fig. 12.4**). Use OPEN/CLOSE to select the function for the button.

Available functions:

OSC (Open/Stop/Close)	PED (Pedestrian access)
SWP (Swipe)	CLS (Close)
OPN (Open)	STP (Stop)
LGT (Courtesy Light)	VAC (Vacation Mode)
AUX (Auxiliary)	OFF (No action)

NOTE: OSC can change to OS and CLS (Close) function, but is not available in the case where PE Beams are not installed.


Press SET to save the settings or STOP to abort without saving.

12.3 Returning To Main Screen

Press STOP to return to the MAIN SCREEN and test the transmitter.
NOTE: To edit the other settings, refer to transmitter edit procedure in Appendix F.

13. Remotely Coding Transmitters

Fig 13.1

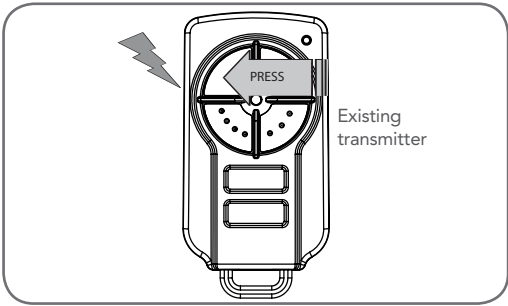

If a transmitter is already coded into the opener, additional transmitters can be coded without being in direct contact with the opener's wall console unit.

NOTE: Only the function of the existing transmitter button can be assigned to new transmitter. Please read instructions prior to proceeding - there is a time-out facility for security reasons.

13.1 Selecting The Function To Be Coded

- Using the existing transmitter, operate the shutter with the transmitter button which has the function to be coded (**Fig. 13.1**) (e.g. Button 1 has been coded with the OSC function assigned).
- If the button's function activates the shutter (PED, SWP, OSC, CLS, STP or OPN) wait for the shutter to complete its cycle.



Fig 13.2

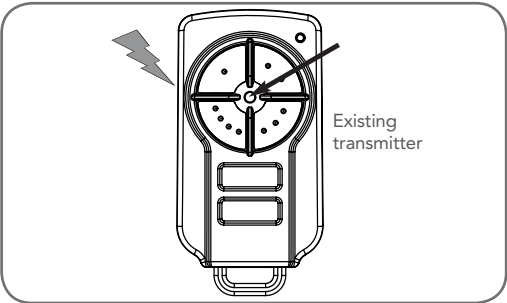


Fig 13.3


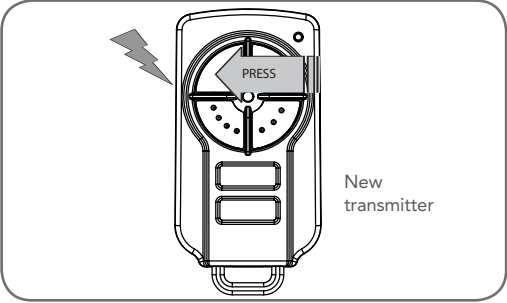


Fig 13.4

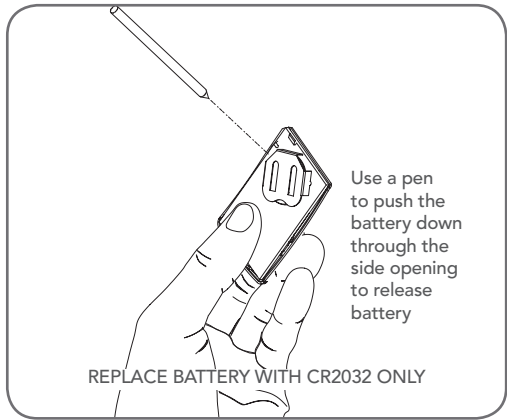

13.2 Activate Remote Code Set Mode

- c. Use a small pin to press and hold through the Coding Hole of the existing transmitter for 2 seconds (Fig. 13.2).
- d. Within 10 seconds, press the button on the new transmitter you wish to code for 2 seconds (Fig. 13.3).
- e. Press the same button again (within 10 seconds) for confirmation.
- f. Test Operation. The new transmitter button should now function as the existing transmitter.

NOTE: When a transmitter is remotely coded, its ID label is set to that of the existing transmitter. If the existing transmitter does not have an ID label assigned, then the ID label of the new transmitter is set to: R/C Tx ###, where ### is the existing transmitters store number. This ensures that the originator of any remotely coded transmitter can be identified.

NOTE: To Manage your Transmitters, refer to Transmitter Management in Appendix G.

13.3 Removing the Battery From the Transmitter

(Battery Type: 3V Lithium Battery CR2032).
Use a non-metallic object (e.g. pen) to remove the battery. (Fig. 13.4).
To test the battery is working, press and hold a transmitter button; (Fig. 13.5).

Light Status	Battery Status
Solid	OK
Flashing	Requires replacement
No light	Requires replacement

Fig 13.5

14. Setting Pedestrian Position

After completing the limit setup procedure the Pedestrian Access position is automatically set to a position which is approximately in the middle of the door travel. The position can be manually set by following the **Setting Pedestrian Position** procedure.

14.1 Setting Pedestrian Position

- a. Drive and stop the door at the desired Pedestrian Access position by using a transmitter or wall control unit.
- b. Press PREV to navigate to Menu 10.
- c. Press SET. MENU 10.1 will be displayed.
- d. Press NEXT to go to MENU 10.3
- e. Press SET on the wall control unit to save the Pedestrian Access position (Fig. 14.1).
- f. Press the STOP button to exit to the main screen.

14.2 Checking Pedestrian Position

When activated by a transmitter button which is coded as Ped mode, the opener drives the door to the preset position from either above or below. Ped Mode's active status is indicated on the display (Fig. 14.2). If a Ped Mode button is pressed while the door is moving, the door will stop. If a Ped Mode button is pressed when the door is in the Ped position, then the door will close.

14.3 Error Displays

During the above procedure many error checks are performed. If an error is detected, a message will be displayed indicating the error.

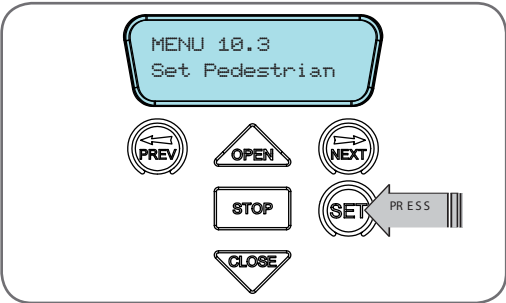


Fig 14.1

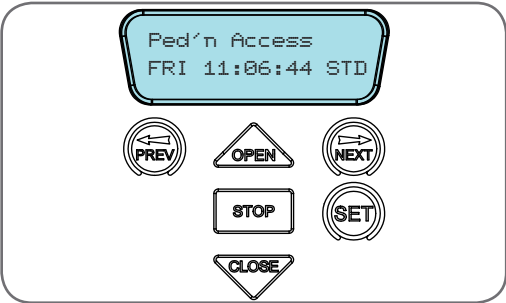


Fig 14.2

15. Auto-Close Mode for V1 Console

15.1 Safety Close Mode

The controller has a built in Safety Beam detection. If Safety Beams are not installed, the controller will automatically turn on the Safety Close Mode. By enabling this parameter, the shutter can only be closed by holding the close button on the wall control unit (Dead Man Set Up).

In order to facilitate an Automated Set Up and enable to shutter to be closed by a transmitter proceed by;

Navigate to "Safety Close Mode (Menu 6.1)"

- a. Press the OPEN button.
- b. Warning will display.



DANGER! Read Manual before turning off Safety Close Mode. Press SET to continue.

- c. Press SET to accept the warning.
- d. Press either the OPEN or CLOSE arrows to change to OFF.
- e. Press SET to Save the change.



WARNING! The Auto-Close function is not available unless Safety Beam is installed.

15.2 Setting Up Standard Auto-Close Mode

Menu 3. Auto-Close Times

The Auto-Close modes automatically close the shutter after it has been operated. To implement this the controller starts a timer once the shutter has reached its desired open position. The timer then counts down and when it expires the controller starts to close the shutter. Details about the four Auto-Close modes follow. Automatic Technology strongly recommend using a Safety Beam for added safety.

Menu 3.1 Standard Auto Close

This mode is selected by entering a non-zero time for the STD Auto-Close parameter. When selected, the shutter will Auto-Close after being fully opened (except when the shutter has reversed to the open position after a motor obstruction or overload. Countdown is suspended by: S.B., OPN or SWP input being active. The countdown is aborted if the STP input is activated. If the shutter is already open and the OPN or the SWP input is activated, then the countdown will start.

15.3 Safety Beam Triggered Auto Close

Menu 3.2 Directional Auto-Close (SB Auto Close)

This mode is selected by entering a non-zero time for the "Safety Beam Auto-Close" parameter. Second Safety beam must be installed and connected to OPN input. Sub menu 5 : OPN I/P 2nd P.E in menu 7 Operating modes must be selected "ON" and also sub menu 4: OPN I/P N/C operation in menu 7 Operating modes must be selected "ON".

This mode is used to auto-close the door only after a vehicle have passed through the doorway to exit the premises. The 2nd Safety Beam (OPN) input must be active when the Safety Beam input is activated in order for Safety Beam triggered auto-close to be activated.

This mode is useful for fire brigade, ambulance stations etc.

15.4 Pedestrian Auto-Close

Menu 3.3 Pedestrian Auto-Close

This mode is selected by entering a non-zero time for the "Ped'n A/C" parameter. When selected, the door will Auto-Close after being opened for pedestrian access unless it was following a reverse from an obstruction.

Menu 3.4 (Safety Beam) Pedestrian Auto-Close

This mode is selected by entering a non-zero time for the "Ped'n A/C" parameter. When selected, the door will Auto-Close after being opened for pedestrian access unless it was following a reverse from an obstruction.

15.5 Auto-Close After Obstruction:

Three parameters are provided to enable the Auto-Close feature to be activated after obstructions and power up. Normally the Auto-Close feature is not enabled after obstructions for safety reasons. Safety Beams must be used for these features to be activated. The three parameters are:

Menu 3.5 (Auto-Close after close overload)

This mode enables the Auto-Close feature to be activated when a close overload occurs (requires Safety Beams).

Menu 3.6 (Auto-Close after open overload)

This mode enables the Auto-Close feature to be activated when an open overload occurs.

Menu 3.7 (Auto-Close after power up)

This mode enables Auto-Close feature after power up.

16. Auto-Close Mode for V2 Console

16.1 Safety Close Mode

The controller has a built in Safety Beam detection. If Safety Beams are not installed, the controller will automatically turn on the Safety Close Mode. By enabling this parameter, the shutter can only be closed by holding the close button on the wall control unit (Dead Man Set Up).

In order to facilitate an Automated Set Up and enable to shutter to be closed by a transmitter proceed by;

Navigate to "Safety Close Mode (Menu 6.1)"

- a. Press the OPEN button.
- b. Warning will display.



DANGER! Read Manual before turning off Safety Close Mode. Press SET to continue.

- c. Press SET to accept the warning.
- d. Press either the OPEN or CLOSE arrows to change to OFF.
- e. Press SET to Save the change.



WARNING! The Auto-Close function is not available unless Safety Beam is installed.

16.2 Setting Up Standard Auto-Close Mode

Menu 3. Auto-Close Times

The Auto-Close modes automatically close the shutter after it has been operated. To implement this the controller starts a timer once the shutter has reached its desired open position. The timer then counts down and when it expires the controller starts to close the shutter. Details about the four Auto-Close modes follow. Automatic Technology strongly recommend using a Safety Beam for added safety.

Menu 3.1 Standard Auto Close

This mode is selected by entering a non-zero time for the STD Auto-Close parameter. When selected, the shutter will Auto-Close after being fully opened (except when the shutter has reversed to the open position after a motor obstruction or overload. Countdown is suspended by: S.B., OPN or SWP input being active. The countdown is aborted if the STP input is activated. If the shutter is already open and the OPN or the SWP input is activated, then the countdown will start.

16.3 Safety Beam Triggered Auto Close

Menu 3.2 (SB AC Trig)

This mode is selected by entering a non-zero time for the "Safety Beam Auto-Close" parameter. This mode is used to Auto-Close the shutter but only after an object has passed through the doorway and has triggered the Safety Beam input. Any Safety Beam or combination of Safety Beams can be configured to activate Safety Beam Auto-Close mode and combinations are:

One Beam only

- i. Safety Beam 1
- ii. Safety Beam 2
- iii. Safety Beam 3

Either Beam

- iv. Safety Beam 1 or Safety Beam 2
- v. Safety Beam 1 or Safety Beam 3
- vi. Safety Beam 2 or Safety Beam 3
- vii. Safety Beam 1 or Safety Beam 2 or Safety Beam 3

Combination

- viii. Safety Beam 1 and Safety Beam 2
- ix. Safety Beam 1 and Safety Beam 3
- x. Safety Beam 2 and Safety Beam 3
- xi. Safety Beam 1, Safety Beam 2 and Safety Beam 3

NOTE: The swipe input can be used to clear the Safety Beam triggered status so that the Safety Beam input must be activated again before the countdown will start. As with the other Safety Beam modes, the STP input will abort countdown and the OPN and SWP inputs will restart the countdown if the shutter is OPEN.

Menu 3.3 Directional Auto-Close (SB Auto Close)

This mode is selected by entering a non-zero time for the "S.B. Auto-Close" parameter. S.B 3 Beam must be installed and configured to EXIT WITH SB1. Sub in menu 6.5. This mode is used to Auto-Close the shutter only after a vehicle has passed through the Safety Beam 3 and then through Safety Beam 1 to exit the premises. This mode is useful for fire brigade, ambulance stations etc.

16.4 Pedestrian Auto-Close

Menu 3.4 Pedestrian Auto-Close

This mode is selected by entering a non-zero time for the "Ped'n A/C" parameter. When selected, the door will Auto-Close after being opened for pedestrian access unless it was following a reverse from an obstruction.

Menu 3.5 (Safety Beam) Pedestrian Triggered Auto-Close

Any Safety Beam or combination of Safety Beams can be configured to activate Safety Beam Auto-Close mode.

Menu 3.6 (Safety Beam) Pedestrian Auto-Close

This mode is selected by entering a non-zero time for the "Ped'n A/C" parameter. When selected, the door will Auto-Close after being opened for pedestrian access unless it was following a reverse from an obstruction.

16.5 Auto-Close After Obstruction:

Three parameters are provided to enable the Auto-Close feature to be activated after obstructions and power up. Normally the Auto-Close feature is not enabled after obstructions for safety reasons. Safety Beams must be used for these features to be activated. The three parameters are:

Menu 3.7 (Auto-Close after close overload)

This mode enables the Auto-Close feature to be activated when a close overload occurs (requires Safety Beams).

Menu 3.8 (Auto-Close after open overload)

This mode enables the Auto-Close feature to be activated when an open overload occurs.

Menu 3.9 (Auto-Close after power up)

This mode enables Auto-Close feature after power up.

17. Time Clock

The opener provides a programmable time clock which can be used to control the Axess® Pro Series 3000 on a timed basis at various times of the week. This section details the time clock operation and configuration.

17.1 Time Clock Operation

The time clock consists of a 7 day clock and storage for 32 programs. The clock is powered by its own battery and therefore does not lose time when the Axess® Pro Series 3000 is turned off. Each time clock program defines the time of the day and the days of the week it is to run and the output function to be executed. Any combination of the days of the week can be selected.

17.2 Time Clock Settings

The Time Clock settings are accessed by selecting the Time Clock menu (MENU 7). Press SET (Fig. 17.1) to enter the menu and then PREV or NEXT to navigate through the options.

Menu 7.1 Set Time/date

This is where the current time, date and day are displayed and set (Fig. 17.2).

NOTE: The time is in a 24 hour format and the Day of the week is not automatically set with the date. To change the settings simply press UP or DOWN to display the cursor and then move to the field to be changed using the NEXT / PREV buttons. Then press OPEN/CLOSE to change the setting and then the SET or STOP buttons to save.

Menu 7.2 View Programs

Select this menu to display or edit the Time Clock programs (Fig. 17.3). When selected, program number 1 is displayed and the cursor is shown on the program number field. The other fields shown include the function, time and days of operation. The example

Fig. 17.4 shows that the DOOR will OPEN at 7 am on Mondays, Tuesdays, Wednesdays, Thursdays and Fridays. Use the OPEN / CLOSE buttons to scroll through the other programs (Fig. 17.5). To edit a program, simply press the NEXT / PREV buttons to move the cursor onto the required field and press the OPEN/CLOSE button to change the value. To save the program settings, press SET or to exit without saving press STOP.

The selectable functions available are:

Function	Operation
RX = Off	From the time when the program with RX = OFF is activated, all the transmitters will be disabled.
RX = On	From the time when program with RX = ON is activated, all the transmitters will be enabled.
Open Door	From the time when the program with OPEN DOOR is activated, the door will open and stay open.
Stop Door	This feature will let the user activate the stop function until the next program starts. The door will not open or close while stop is activated.
Free Door	Release the controls from the timer.
Off	This will temporarily disable the program.

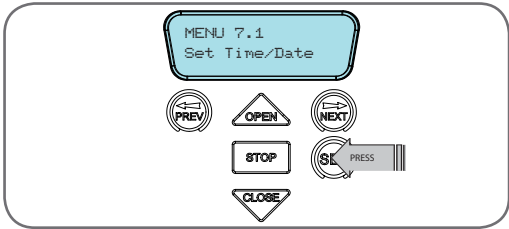


Fig 17.1

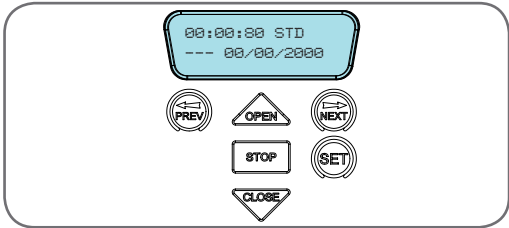


Fig 17.2

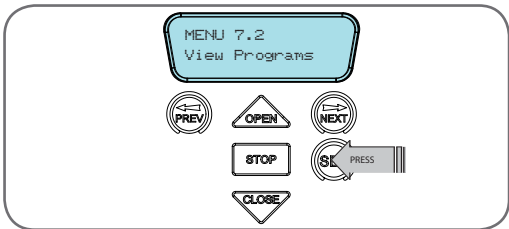


Fig 17.3

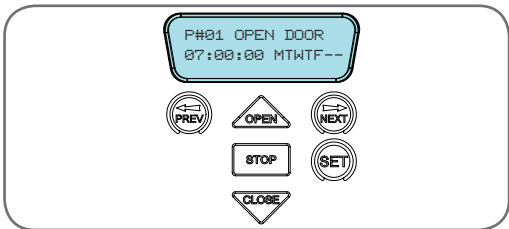


Fig 17.4

NOTE: The most recent program that applies to an output remains active until a new program takes effect.

NOTE: If a Time Clock program does not have a day selected then it can not be executed. If a Time Clock program is taking control of the opener, then this status is displayed on the LCD. The MAIN SCREEN and clock status screen flashes alternatively.

Fig 17.5



17. Time Clock

Menu 7.3 Settings

Under this menu, three sub menus are available:

- a. Run Programs. The programs of the timer can be interrupted by selecting RUN PROGRAM off.
- b. Configuration Of GPI Input. General Purpose Input can be configured as OSC, PED or DST setup.
- c. This is activated by the GPI input terminal with the N/O switch.
 - i. When GPI Selected As OSC: If the door is moving, the activation of GPI input or pressing a transmitter button with the OSC function assigned will cause the door to stop. The next trigger will move the door in the opposite direction to the last travelled.
 - ii. When GPI Input Is Configured As PED: The activation of the GPI input or by pressing a transmitter button with PED function assigned will open the door partially to allow pedestrian access but prevent vehicle access. The position the door is driven to is automatically set to halfway during setting of the travel limits, but can be adjusted to suit.
 - iii. When GPI Input Is Configured As DST: GPI input can be used to switch between STD time and DST (daylight savings time). The AUX input needs to be constantly active to show day light saving time.

17.3 Day Light Saving Time Adjustment

The time selected is the amount of time added to STD time when DST is selected by AUX input. Options are OFF, 30, 60, 90 or 120 minutes.

18. Accessories Installation

18.1 Fitting Courtesy Lights

A light relay module (optional) can be connected to the aux out on the console to control the courtesy light.



WARNING: A qualified electrician must perform the installation where 240V AC power is used.

Menu 4. Light Times

- a. Press NEXT or PREV on the wall control unit to navigate to Menu 4 Light/Lock Times.
- b. Press SET to select the sub menu.
- c. Press NEXT or PREV to navigate through the sub menu.
- d. Press OPEN to increase or CLOSE to decrease the time.
- e. Press SET to save the new time.
- f. Press the STOP button two times to exit.
- g. Test the light operation.

19. Specifications

Technical Specifications	Single Phase		Three Phase		
Power supply	230V - 240Va.c. 50Hz		Three Phase 415 Volts AC		
Motor type	Single Phase 240 Volts (Delta Connection)		Three Phase 415 Volts AC (star connection)		
Model	AX3105	AX3110	AX3305	AX3310	AX3315
Motor Power	0.5HP	1.0HP	0.5HP	1.0HP	1.5HP
Maximum shutter opening	18m ²	36m ²	18m ²	36m ²	50m ²
Opener Limits Travel	30.5 turns of output shaft		30.5 turns of output shaft		
Duty Cycle	60%		60%		
Receiver type	UHF Multi-frequency FM Receiver		UHF Multi-frequency FM Receiver		
Receiver code storage capacity	511 X 4 button Transmitter Codes		511 X 4 button Transmitter Codes		
Receiver Sensitivity	– 103 dB		– 103 dB		
Transmitter frequency	UHF Multi-frequency FM Transmitter		UHF Multi-frequency FM Transmitter		
Coding type	Code hopping		Code hopping		
Number of code combinations	Over 100 billion random codes		Over 100 billion random codes		
Code generation	Non-linear encryption algorithm		Non-linear encryption algorithm		
Courtesy light	Common Collector Transistor output		Common Collector Transistor output		
Mains fuse			FLQ10 - 500 VAC time delayed fuse x 3		
Controller fuse	10A slow blow		TDC11 - 250 milliamp 1000 VAC slow blow fuse		
Transmitter Battery	CR - 2032 (3 Volts)		CR - 2032 (3 Volts)		
Real Time Clock Battery	CR -1220 (1.5 Volts)		CR -1220 (1.5 Volts)		

- NOTE:**
- a. If the Safety Beams are not installed then the controller will automatically go into “Safety Close” mode. A limited number of features are available in this mode, please refer to menu 6.1 in Section 16.1.



20. Troubleshooting

Symptom	Possible cause	Remedy
Blank display screen.	Mains power not switched on.	Switch on mains power.
	Communication cable not connected.	Connect the communication cable.
	Drive unit cover is loose or missing.	Install / secure drive unit cover.
Logic console displays "Drive Disengaged".	Hand chain is not freely hanging.	Free the hand chain.
During limit setting, pressing the close button causing the shutter to open.	Motor running in wrong direction.	Change the motor direction by pressing stop button on the logic console once.
Opener Overloads.	Shutter is locked.	Unlock the shutter.
	Shutter tracks/hardware damaged.	Shutter requires service/repair by qualified technician.
	Full load current settings are too low.	Adjust the full Load current in menu 2.1. (Appendix A & C)
Shutter operates from logic console (OPEN/CLOSE) button but not from transmitter.	Transmitter code not stored in memory.	Code transmitter into opener's memory. (Section 12.1)
	Transmitters operation disabled from the time clock.	Enable the transmitter operation in the time clock menu. (Section 17.5)
	The opener is in "Vacation Mode".	Turn off "Vacation Mode". (Appendix C Menu 6.16)
	Flat battery in transmitter.	Replace battery (Section 13.3)
Shutter does not close with transmitter.	Safety Close Mode is on.	Turn the Safety Close Mode off. (Section 15.1 or 16.1)
	Transmitter does not contain TrioCode™128 Technology	Check that the transmitter has grey buttons and the model number on the back displays V2. Contact dealer for support if otherwise.
	Safety Beams not installed or not working properly.	Make sure Safety Beams are operational.
Shutter will not close fully.	Shutter limit positions need to be reset.	Reset limit positions. (Section 10 & 11)
	Shutter obstructed and reverses.	Clear obstruction.
Shutter will not open fully.	Shutter limit positions need to be reset.	Reset limit positions. (Section 10 & 11)
	Shutter obstructed.	Clear obstruction.
Auto-Close not working.	Safety Beam not installed.	Install Safety Beam. (Section 9)
	Safety Beam or wiring faulty.	Repair Safety Beam or replace wiring.
	Safety Beam not aligned correctly.	Re-align optics.
	SafetyBeam is obstructed.	Remove obstruction from path of Safety Beam
	Shutter obstructed when closing or opening.	Remove obstruction.
	Auto-Close time not set.	Set Auto-Close times. (Section 15 & 16)

21. Maintenance



WARNING!: Failure to maintain your shutter may void the warranty on your shutter opener.



CAUTION: Shutter adjustments should only be carried out by experienced persons, as this function can be dangerous if not performed under strict safety procedures



ELECTROCUTION! Disconnect the opener power cord from the mains power before making any door repairs / maintenance or removing the opener button cover.

21.1 Shutter Maintenance

The shutter should be tested manually regularly to ensure it is in good condition. A poorly maintained shutter could cause fatal or serious injuries or serious damage to property. Therefore it is recommended:

- Frequently examine the shutter, particularly the cables, springs and mountings for signs of wear, damage or imbalance. **DO NOT USE** if repair or adjustment is needed since a fault in the installation or an incorrectly balanced shutter may cause injury.

21.2 Lubrication (every 3 - 6 months)

To ensure a long and trouble free life for your shutter the following is recommended:

- Lubricate the drive chain.
- Guide Tracks: Clean the internal sections of the guide tracks with a cloth dampened with mineral turps or methylated spirits.

21.3 Shutter Service and Repair

If correct maintenance and servicing are not carried out, warranty may be void. To keep your shutter running well, it is recommended that your shutter be serviced by an experienced technician, every **12 months** or earlier if required:

- Check the manual operation of the shutter by using the hand chain.
- Fasteners: Check all screws, nuts and bolts to ensure they are secure.

21.4 Opener Maintenance

To ensure a long and trouble free life for your opener the following is recommended:

- Monthly:
 - i. Check the tension, condition and alignment of the drive chain. Adjust / replace if required.
 - ii. Check the operation of the Safety Beams.
- Quarterly:
 - i. Check tightness of the fixing bolts and grub screw of the sprocket.

NOTE: If the shutter does not operate smoothly, call your industrial shutter professional.

21.5 Service Indicator

As a reminder the Axess Pro Series 3000 has a built in maintenance counter. This counter has a factory default of 60,000 cycles, and it is adjustable from 0 to 60,000 cycles. When this counter expires, at the start of each door movement the beeper will sound three times and "SERVICE DUE" message displays on the console.

At this time Automatic Technology recommends you contact your industrial shutter professional to perform an annual door service.

Service Record

Record any maintenance in the following table to assist in any warranty service.

Date	Service by Company Name	Print Name	Signature	Warranty Counter Number



22. Appendix

A - Console Menu Structure

- OPERATIONAL BUTTONS:**
- 1. Press PREV/NEXT buttons move to Left/Right.
 - 2. Press OPEN/CLOSE buttons to change setting.
 - 3. Press SET button to save changes.
 - 4. Press STOP to return to MENU without saving changes.

NOTE: The System will automatically return to the main screen after 30 secs if a menu screen is displayed and no buttons are pressed.

Parameter	Min	Max	Default	Step	Unit	Menu No.	Section
Menu 1 - Code Transmitter							
STORING TRANSMITTERS	0.0	511				1	13.1
Menu 2 - Current Trips							
Full Load Amps 0.5 HP model AX3105	0.0	1.6	1.6	1	Amps	2.1	Appendix C
Full Load Amps 1.0 HP model AX3110	0.0	2.9	3.7	1	Amps	2.1	Appendix C
Full Load Amps 0.5 HP model AX3305	0.0	1.6	1.6	1	Amps	2.1	Appendix C
Full Load Amps 1.0 HP model AX3310	0.0	2.9	2.9	1	Amps	2.1	Appendix C
Full Load Amps 1.5 HP model AX3315	0.0	3.5	3.5	1	Amps	2.1	Appendix C
100% Overload Time	0	30	10	1	Sec	2.2	Appendix C
Menu 3 - Auto Close							
V1 CONSOLE:							
STD AUTO-CLOSE TIME Sets and enables the standard Auto-Close time	0.0	300.0	0.0	1.0	Sec	3.1	15.2
S.B AUTO-CLOSE TIME Sets and enables the S.B triggered Auto-Close time	0.0	60.0	0.0	1.0	Sec	3.2	15.3
PEDESTRIAN AUTO-CLOSE TIME Sets and enables the Pedestrian Auto-Close time	0.0	60.0	0.0	1.0	Sec	3.3	15.4
S.B PEDESTRIAN AUTO-CLOSE TIME Sets and enables the PE Pedestrian Auto-Close time	0.0	60.0	0.0	1.0	Sec	3.4	15.4
AUTO-CLOSE AFTER CLOSE OBSTRUCTION Enables Auto-Close feature after close obstructions (requires Safety Beams)	Off	On	Off			3.5	15.5
AUTO-CLOSE AFTER OPEN OBSTRUCTION Enables Auto-Close feature after open obstructions	Off	On	Off			3.6	15.5
AUTO-CLOSE AFTER POWER UP Enables Auto-Close feature power up	Off	On	Off			3.7	15.5
V2 CONSOLE							
STD AUTO-CLOSE TIME Sets and enables the standard Auto-Close time	0.0	300.0	0.0	1.0	Sec	3.1	16.2
S.B AUTO-CLOSE TRIG Selects the Safety Beam or combination of Safety Beams to enable the S.B triggered Auto-Close mode.	None		None			3.2	16.3
S.B AUTO-CLOSE TIME Sets and enables the S.B triggered Auto-Close time	0.0	60.0	0.0	1.0	Sec	3.3	16.3
PEDESTRIAN AUTO-CLOSE TIME Sets and enables the Pedestrian Auto-Close time	0.0	60.0	0.0	1.0	Sec	3.4	16.4
S.B PEDESTRIAN AUTO-CLOSE TRIG Selects the Safety Beam or combination of Safety Beams to enable the S.B triggered Pedestrian Auto-Close mode.	None		None			3.5	16.4
S.B PEDESTRIAN AUTO-CLOSE TIME Sets and enables the PE Pedestrian Auto-Close time	0.0	60.0	0.0	1.0	Sec	3.6	16.4
AUTO-CLOSE AFTER CLOSE OBSTRUCTION Enables Auto-Close feature after close obstructions (requires Safety Beams)	Off	On	Off			3.7	16.5
AUTO-CLOSE AFTER OPEN OBSTRUCTION Enables Auto-Close feature after open obstructions	Off	On	Off			3.8	16.5
AUTO-CLOSE AFTER POWER UP Enables Auto-Close feature power up	Off	On	Off			3.9	16.5

Appendix

A - Console Menu Structure

Parameter		Min	Max	Default	Step	Unit	Menu No.	Section
Menu 4 - Light / Lock Times								
ON AFTER CYCLE LIGHT TIME Time light remains on for after a cycle		0	255	60	1	Sec	4.1	18.1
ON BEFORE OPEN CYCLE LIGHT TIME Minimum time light is activated for prior to opening		0	25.5	0	0.1	Sec	4.2	18.1
ON BEFORE CLOSE CYCLE LIGHT TIME Minimum time light is activated for prior to closing		0	25.5	0	0.1	Sec	4.3	18.1
Menu 5 - Motor Settings								
SINGLE PHASE 3100 SERIES	OPEN SPEED FREQUENCY Sets the speed of the motor	15	75	50	1	HZ	5.1	Appendix C
	CLOSE SPEED FREQUENCY Sets the speed of the motor	15	75	50	1	HZ	5.2	Appendix C
THREE PHASE 3300 SERIES	MOTOR START TIME sets overload ignore time from the start of the motor	0.1	2.5	1.0	0.1	Sec	5.1	Appendix C
	MOTOR PAUSE TIME Sets the time for motor to come to rest	0.1	2.0	0.3	0.1	Sec	5.2	Appendix C
Menu 6 - Operating Modes								
Safety Close Mode		Off	On	On			6.1	16.1
Safety Open Mode		Off	On	Off			6.2	Appendix C
Safety Beam Input Response Mode Sets the S.B response mode. Options are OPEN and CLOSE cycles stop, Close cycles stop or Close cycle reverse		OPN & CLS stop CLS to stop CLS to reverse		CLS to reverse			6.3-5	Appendix C
SB REVERSE TIME		5	FULL	FULL	1	Sec	6.6	Appendix C
GPI INPUT MODE configure the GPI input. Options are OSC, PED, SWP and DAY LIGHT SAVING		OSC, PED, DST		OSC			6.7	Appendix C
PED INPUT = SWIPE MODE Selects PED input functions as pedestrian access swipe input		Off	On	Off			6.8	Appendix C
OPN INPUT N/C OPERATION Selects operating polarity of OPN input		Off	On	N/O			6.9	Appendix C
STP INPUT N/C OPERATION Selects operating polarity of STP input		Off	On	N/O			6.10	Appendix C
FIRE INPUT N/C OPERATION Selects operating polarity of FIRE input		Off	On	N/O			6.11	Appendix C
FIRE INPUT MODE configure the fire input. Options are OPN, CLS and PED		OPN, CLS, PED		OPN			6.12	Appendix C
REMOTE CODE ENABLED Selects remote transmitter coding function		Off	On	On			6.13	Appendix C
ACTIVITY REPORTS Select report to be output		Off	255	Off	1		6.14	Appendix C
ACTIVITY REPORT ID Selects ID for controller, sent with activity report		0	65535	0	1		6.15	Appendix C
VACATION MODE Selects Vacation Mode - disables remote control		Off	On	Off			6.16	Appendix C
PASSWORD Selects password protection for all changes		Off	On	Off			6.17	Appendix C
Transmitter Grouping		Off	On	Off			6.18	Appendix C



Appendix

A - Console Menu Structure

Parameter	Min	Max	Default	Step	Unit	Menu No.	Section
Fault Auto Reset Selects Fault Auto Reset	Off	On	Off			6.19	Appendix C
LED Low Power Mode Selects saving the power by turning LEDs Off	Off	On	Off			6.20	Appendix C
Console OSC Buttons Selects to lock out the console buttons	Off	On	On			6.21	Appendix C
AUX OUT O/P can be activated by either LIGHT DRIVE ,CLOCK/ TXER/SB, OPEN or CLOSE status			LIGHT DRIVE			6.22	Appendix C
Menu 7 - Time Clock							
SET TIME / DATE	Off	On	Off			7.1	17.1
VIEW / EDIT PROGRAMS	Off	On	Off			7.2	17.2
SETTINGS	Off	On	Off			7.3	17.3
Menu 8 - Diagnostics							
TEST INPUTS - Controls input display status			Inactive			8.1	Appendix D
TEST TRANSMITTERS (TX'ERS)						8.2	Appendix D
DISPLAY HISTORY						8.3	Appendix D
MEMORY USAGE						8.4	Appendix D
SERVICE COUNTER			60,000			8.5	Appendix D
EVENT COUNTER						8.6	Appendix D
INSTALL DATA						8.7	Appendix D
PARAMETERS						8.8	Appendix D
VERSION INFO - Firmware						8.9	Appendix D
Menu 9 - Memory Tools							
CLR CONTROL						9.1	Appendix E
CLR TRANSMITTERS (TX'ERS)						9.2	Appendix E
Menu 10 - Setup Travel							
SETUP LIMITS						10.1	11.1 or 12.4
REPROFILE TRAVEL						10.2	12.5
SET PEDESTRIAN						10.3	15.1

Appendix

B - Viewing & Editing Logic Console Parameters

This section illustrates how to locate, view and adjust parameters in the logic console unit.

Locating parameters

Refer to MENU STRUCTURE on Page 15 or the preceding section for CONTROL BOARD ADJUSTMENTS. Locate the required parameter and note the MENU number. The example used in **(Fig. B.1)** displays Menu 2.2 "100% O/L Time"

Changing Settings

- a. Press NEXT/PREV to navigate to the required menu.
- b. Press SET to show the sub-menu.
- c. Press NEXT/PREV to go to the required sub-menu.
- d. Press OPEN/CLOSE to change the parameter setting.
 - i. Holding the button down causes the parameter's value to change rapidly.
 - ii. The longer the button is held, the faster the value changes.
- e. Press SET to SAVE the setting.

Reload Default Setting

- a. Press NEXT/PREV buttons to display the LOAD DEFAULT screen.
- b. Press SET to load the default value.

Return To Menu

If the parameter's value is not to be changed, press STOP to return to the sub menu. Press STOP again to return to the MAIN SCREEN.

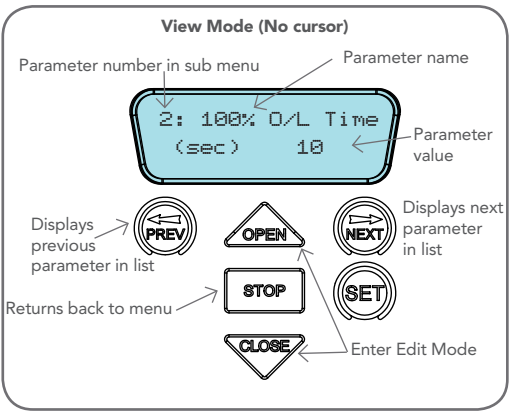


Fig B.1

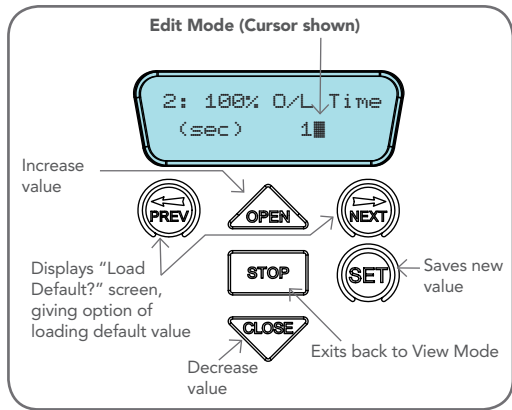


Fig B.2



Appendix

C - Control Board Adjustments

The standard operation of the opener can be altered by editing various parameters. This section describes the parameters and the effect they have. Use the VIEWING AND EDITING PARAMETER PROCEDURE (Appendix B) to make changes.

Menu 2 Current Trips

Motor overload detection is provided to protect the shutter and the opener. The motor is designed to run with full load current. For one horse power motor with the default values the opener will run with 7.4 Amps for 10 seconds before going into overload.

Menu 5. Motor Settings

Single Phase Models (3105 & 3110)

Motor speed: The maximum speed the motors run at is controlled by the OPEN AND CLOSE SPEED VOLTAGE parameter. The default value is the maximum recommended for normal operation. If however the shutter moves too quickly or too slowly for a particular installation, the frequency / time can be reduced to make the motors run slower or faster.

NOTE: Altering these parameters will cause the travel limits to be cleared.

Motor Speed Control - soft start/soft stop: The speed of the motor is controlled by a microprocessor which ramp up the speed as the shutter starts to move, and ramp down the speed as it approaches the travel limits to provide a gentle stop. This provides a gentle start and stop.

Three Phase Models (3305, 3310 & 3315)

Motor Start time: Sets the overload ignore time from the start of the motor.

Motor Pause Time: Sets the time for the motor to come to rest.

Menu 6 (V1 Consoles have a reduced number of Menu 6 options)

Menu 6.2 Safety Open Mode

By enabling this parameter, the user can open the shutter only by holding the open button on the wall control unit or by holding the open input active. The shutter can not be opened by the transmitters.

Menu 6.3 First (SB1) Safety Beam Response Mode

The Safety Beams input can be configured to respond in one of eight modes.

- i. **Reverses Close Cycles** In this mode, the Safety Beam input has no effect when opening but will cause the door to reverse if activated when closing.
- ii. **Close Cycles Stop** In this mode, the Safety Beam input has no effect when opening but will stop the door when closing.
- iii. **Open and Close Cycles Stop** In this mode, all cycles are prevented from being completed or initiated when the Safety Beam input is active.
- iv. **Open input** In this mode, open cycle is initiated when the Safety Beam is activated.
- v. **Swipe input** In this mode, open cycle is initiated when the Safety Beam is activated.
- vi. **Close input** In this mode, close cycle is initiated when the Safety Beam is activated.
- vii. **Ped input** In this mode, ped cycle is initiated when the Safety Beam is activated.
- viii. **Aux O/P trigger** In this mode, aux output is triggered when the Safety Beam is activated.
- ix. **Disabled** In this mode, Safety Beam is disabled.

Menu 6.4 Second Safety Beam (SB2) Response Mode

Same as above menu 6.3

Menu 6.5 Third Safety Beam (SB3) Response Mode

Same as above menu 6.3

Menu 6.6 Safety Beam Obstruction Reverse Time Mode

Normally after a Safety Beam obstruction the door will fully open to its open position. After a Safety Beam Close obstruction, the doors open cycle can be reduced from 5 sec to its full open position.

Menu 6.7 GPI Input

GPI input can be configured as OSC, PED or DST setup. The GPI input terminal is activated by the N/O switch.

- i. **When GPI Selected As OSC:** If the door is moving, the activation of the GPI input or by a transmitter button with the OSC function assigned will cause the door to stop. The next trigger will move the door in the opposite direction to the last travelled.
- ii. **When GPI Input Is Configured As PED:** The activation of the GPI input or by a transmitter button with PED function assigned will open the door partially to allow pedestrian access but prevent vehicle access. The position the door is driven to is automatically set to halfway during setting of the travel limits, but can be adjusted to suit.
- iii. **When GPI Input Is Configured As SWP:** Activation of GPI input in this mode will open the door.
- iv. **When GPI Input Is Configured As MANUAL OPERATION:** Activation of GPI input in this mode will disable all the transmitters.
- v. **When GPI Input Is Configured As DST:** The GPI input can be used to switch between STD time and DST (daylight savings time). The time selected is the amount of time added to STD time when DST is selected. The Options are OFF, 30, 60, 90 or 120 minutes. The GPI input needs to be constantly active to show day light saving time.

Appendix

C - Control Board Adjustments

Menu 6.8 PED Input Function

If GPI or Fire Input is selected as PED then these inputs can be configured to a SWIPE type input for pedestrian access. This provides full functionality with the Safety Beam Triggered Pedestrian Auto-Close function.

Menu 6.9 Open Input Polarity

The OPN input is normally configured for N/O operation. This parameter allows its operation to be changed to N/C.

Menu 6.10 STP Input Polarity

The STP input is normally configured for N/O operation. This parameter allows its operation to be changed to N/C.

Menu 6.11 FIRE Input Polarity

The FIRE input is normally configured for N/O operation. This parameter allows its operation to be changed to N/C.

Menu 6.12 FIRE Input Configuration

Fire input can be configuration as OPN ,CLS (available only if Safety Beams are installed) or PED function. Activated by FIRE input terminal with N/O or N/C (if selected) switch.

- i. **When Fire Input Is Configured As CLS** : Activating the fire input will cause the shutter to close only if Safety Beams are installed. Holding the input active will prevent shutter from opening.
- ii. **When Fire Input Is Configured As PED**: The activation of fire input will open the shutter partially to allow pedestrian access but prevent vehicle access. The position the shutter is driven to is automatically set to halfway during setting of the travel limits, but can be adjusted to suit.
- iii. **When Fire Input Is Configured As OPN** : Activating the fire input will cause the shutter to open. Holding the input will prevent the shutter from closing.

6.13 Remote Code

The controller supports the Remote Code Set feature. This parameter can be used to disable the feature for security or transmitter management reasons.

6.14 Activity Reports

This parameter enables activity report outputs. Contact Automatic Technology for more details.

6.15 Activity Report ID

This parameter sets the ID of the controller that is sent with the activity report. Contact Automatic Technology for more details.

6.16 Vacation Mode

Vacation Mode blocks all but one designated remote control transmitter from activating the Axess® Pro Series 3100. The mode is activated by pressing a transmitter button with the VAC function assigned until the console displays that Vacation Mode is enabled (approx. 5 secs). When activated all the transmitter buttons will be ignored. To turn Vacation Mode off, press a transmitter button with the VAC function assigned. Vacation Mode can also be turned on or off manually by editing the Vacation Mode parameter. Vacation Mode can be turned on or off using this parameter.

6.17 Password Protection

The password feature enables all parameters and configuration settings to be protected unless a password is entered. When this feature is turned on, the user is requested to enter the desired password to be used. The password protection feature has a time-out that expires after 60 seconds of inactivity. Alternatively, the user may log out manually by pressing exit when the main screen is displayed.

6.18 Transmitter Grouping

The transmitter store number display format can be changed to show a grouped format. When grouping is selected, instead of displaying the store location as a number between 1 and 511, it will display as ##\$ where ## is the group number and \$ is a character a,b,c,d,e,f,g or h which indicates the group member.

6.19 Fault, Auto Reset

When selected, the controller will reset any fault automatically.

6.20 LED Low Power Mode

When LED low power mode is selected, the controller will turn the LED power off to save the power.

6.21 Console OSC Buttons

Console can be locked out by selecting console OSC buttons OFF.

6.22 AUX Output Operation

AUX output can be selected to be driven by:

- i. **Light Drive**: Although the GDO10V3L2 drive unit has a light relay output, a light relay module can be connected on the console between V+ and AUX OUT terminal which will turn the courtesy light on and off.
- ii. **Clock/Transmitter**: By selecting this option, AUX output can be triggered by programming the clock timer or by the transmitter.
- iii. **Open Status**: Selecting this option will cause the AUX output to stay active as long as the shutter stays open.
- iv. **Close Status**: Selecting this option will cause the AUX output to stay active as long as the shutter stays closed.

Appendix

D - Diagnostic Tools

The controller provides several diagnostic tools from within the Diagnostics Menu (Menu 8). This section details the function of each tool and its use.

Navigating To Diagnostics Menu

- Press PREV to navigate to Menu 8 (**Fig. D.1**).
- Press SET to display the menu of available functions.
- Press PREV or NEXT to cycle through diagnostic tools.
- Press SET to select.

Menu 8.1 Test Inputs

This tool is used to view the state of the control inputs. When selected, a screen is displayed (**Fig. D.2**) which indicates the state of each input. If the name of the input is in upper case or number in the bracket, then the input is active. Conversely if the input is in lower case and [---] dash in the bracket, then the input is inactive. For normal operation, all inputs should be inactive. When finished, press STOP.

Menu 8.2 Test Transmitters (Tx'ers)

This tool is used to test receiver/transmitter functionality. When selected, a screen is displayed which prompts for a transmitter button to be pressed (**Fig. D.3**) and whether ID or serial numbers are to be displayed.

The opener will then beep each time a transmission is received. If the transmitter button is stored in the controller memory and has a function assigned to it, a second screen will be displayed that shows the transmitter details along with the button pressed (**Fig. D.4**). The example shows the case where transmitter number 14 is activated by button 4. Note ID is selected for display.

Menu 8.3 Display History

The opener keeps a record of the last 64 events that have taken place. The events include the type of drive cycles executed, obstruction detection, various faults, power failures etc. When this tool is selected, the screen displays the last event that occurred (**Fig. D.5**). Press NEXT or PREV to view each event. The "EVENT#" field shows the sequence of the events, with (1) being the first and (64) being the last. The example shows that the last event was a close cycle which succeeded in closing the door. When finished viewing the events, press STOP to exit.

Menu 8.4 Memory Usage

This tool displays the number of transmitter store locations used and the number free (**Fig. D.6**).

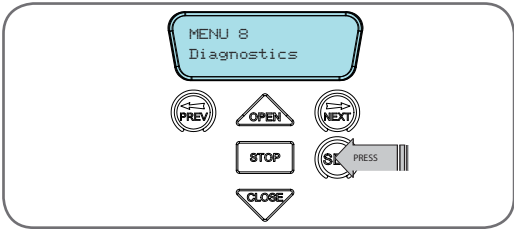


Fig D.1

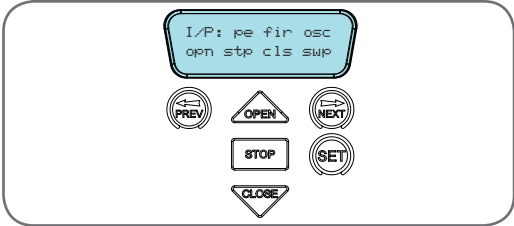


Fig D.2

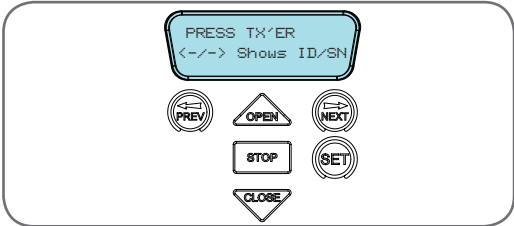


Fig D.3

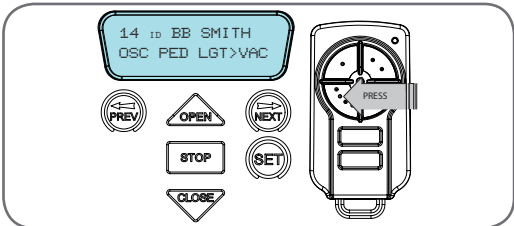


Fig D.4



Fig D.5

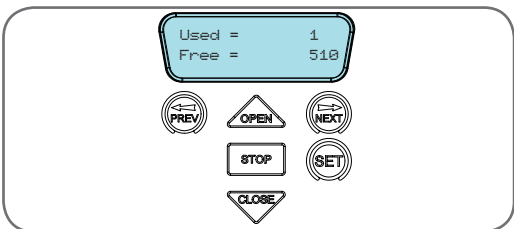


Fig D.6

Appendix

D - Diagnostic Tools

Menu 8.5 Service Counter

The opener provides a periodic service counter which can be set to expire after a number of drive cycles. When expired, the opener will beep three times at the beginning of each drive cycle and a message will be displayed on the MAIN SCREEN (**Fig. D.7**). This tool displays the current value of the service counter and allows the user to set its value using the normal parameter editing techniques (See Appendix B). If the service counter is not to be used, it can be set to the maximum number (60,000).

Menu 8.6 Event Counters

The opener keeps a count of number of times a particular event occurs. The list of event counters kept is shown below. When this tool is selected, the first event counter is shown (**Fig. D.8**). Press NEXT or PREV to step through the list. The example shows the OPEN CYCLE event counter with a value of 500. When finished viewing press STOP.

- | | |
|----------------------------|----------------------------|
| 1: Open Cycles | 2: Close Cycles |
| 3: PED Cycles | 4: Setup Limits |
| 5: Warranty Cycles | 6: Open O/LS |
| 7: Close O/LS | 8: Open Stalls |
| 9: Close Stalls | 10: Direction Faults |
| 11: Position Sensor faults | 12: Drive Memory Faults |
| 13: Position Wrap Faults | 14: Console Volt Faults |
| 15: PCB Temp Fault | 16: Comms Compat Faults |
| 17: INV logic faults | 18: Low DC Bus Volt Faults |

Menu 8.7 Install Data

- i. **Open Position:** Shows the fully open position door counter.
- ii. **PED Position:** Shows the pedestrian position counter.
- iii. **Open Time:** Time taken for the opener to drive the door to open position.
- iv. **Close Time:** Time taken for the opener to drive the door to the close position.

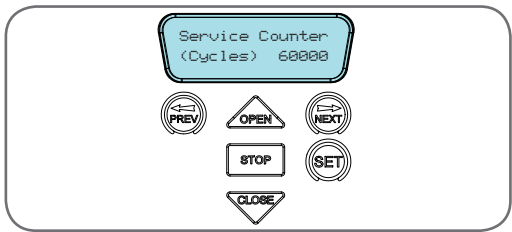


Fig D.7

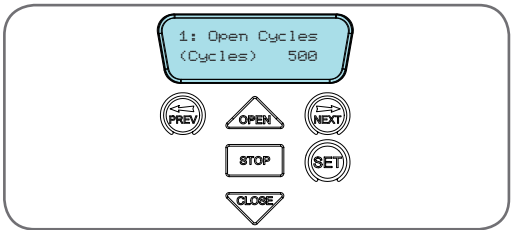


Fig D.8

Menu 8.8 Parameters

Position of the limit counter, frequency, current used by the motor, overload graph, PCB temperature and DC bus voltage are displayed under this menu.

All the parameters mentioned above can also be viewed while the opener is running. By default, the current used by the motor will be displayed on the LCD screen. This can be useful to check the condition of the shutter. Scroll through other parameters by pressing NEXT or PREV buttons while the shutter is running.

Menu 8.9 Version Info

Firmware information for the Axess® Pro Series 3100's drive and console are shown here.

Appendix

E - Memory Tools

Menu 9.0 Memory Tools

The Memory Tools accessed from within Menu 9 are used to clear the transmitter codes from the openers memory and clear the controller's memory. Once selected the PREV or NEXT buttons can be used to view the Memory Tool options. To execute the displayed option simply press SET.

Menu 9.1 Clear Control

This option will clear the shutter control memory and reload the factory set defaults for parameters such as the lock time, light time, Auto-Close times etc. It will also clear the travel limits.

Menu 9.2 Clear Transmitters (Tx'ers)

This option will clear the transmitter storage memory.

Appendix

F - Transmitter Editing

Display Transmitter Record
Using one of the methods below, you can display the required transmitters details.

Navigating To “Edit Transmitter” Menu

- a. Press NEXT to navigate to Menu 1 (**Fig. F.1**) .
- b. Press SET to enter the transmitter edit procedure.
- c. Press NEXT to enter transmitter list and edit mode.

Editing Button Function Field

- a. Press NEXT or PREV to move the cursor to the left or right and between the top and bottom lines to select the desired field.
- b. Press OPEN or CLOSE to change the displayed value (**Fig. F.2**). The available functions are shown below. Selecting OFF will prevent the opener responding to that button.

Available functions

- OSC (Open/Stop/Close)
- PED (Pedestrian access)
- SWP (Swipe)
- CLS (Close)
- OPN (Open)
- STP (Stop)
- LGT (Courtesy Light)
- VAC (Vacation Mode)
- AUX (Auxiliary)
- OFF (No action)

NOTE: OSC will change to OS and CLS (Close) function is not available in the case where PE Beams are not installed.

- c. Press SET to save changes or press NEXT or PREV to move to the next field.
 - i. The example in (**Fig. F.3**) shows that PED is assigned to the transmitter button two.
 - ii. The transmitter in the example is transmitter number 14 which has the ID label AB Smith.

NOTE: If all button functions are set to OFF, when SET is pressed, the opener will prompt to confirm if the transmitter is to be deleted. Press SET to delete or STOP to continue editing.

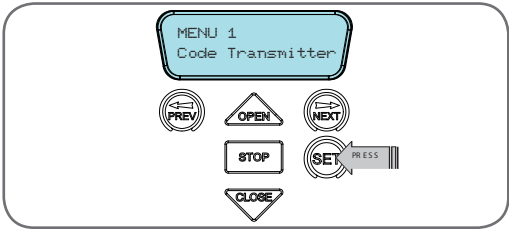


Fig F.1

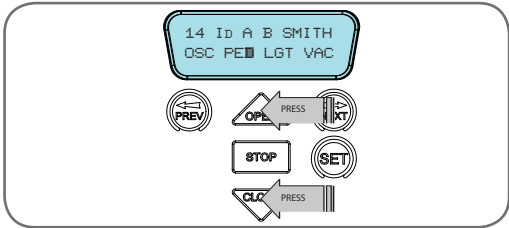


Fig F.2

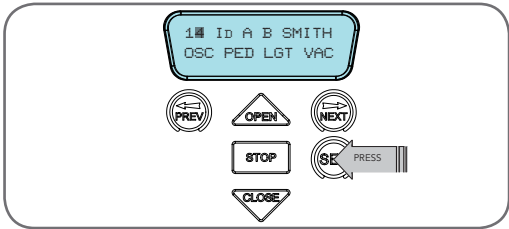



Fig F.3



Appendix

F - Transmitter Editing

Fig F.4

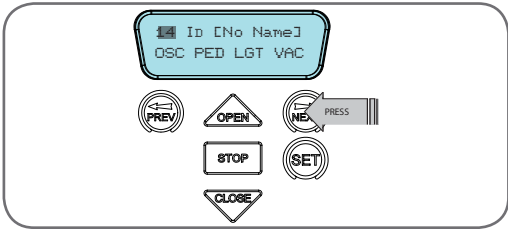


Editing The Store Location

This feature is only available when coding the first button of a new transmitter.

- Press NEXT or PREV to move the cursor over Store No. **(Fig. F.4)**
- Press UP or DOWN to select new Store No.
- Press SET to confirm or NEXT/PREV to move to the next field.

Fig F.5

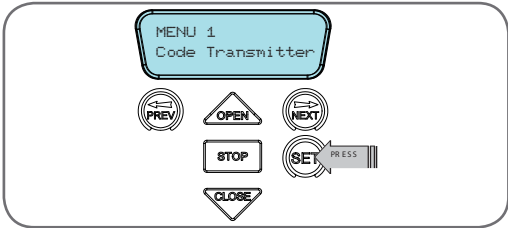


Selection Of ID or Serial Number Display

- Press NEXT to navigate to Menu 1 "Code Transmitter" **(Fig. F.5)**.
- Press SET to enter the transmitter edit procedure.
- Press NEXT to enter transmitter list and edit mode.
- Press NEXT/PREV to move the cursor over the ID field.
- Press NEXT to reveal the Serial Number **(Fig. F.6)**.

The serial number display is provided for additional means of identification. The transmitter in this example has serial number 12345.

Fig F.6

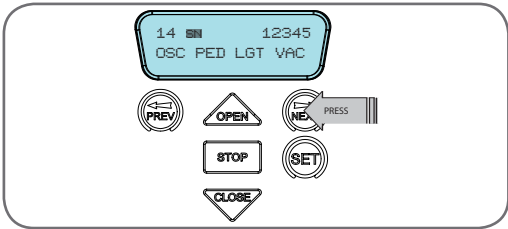

Editing A Character Field

- Press NEXT or PREV to move the cursor. **(Fig. F.7)**
- Press UP or DOWN to scroll through and select a new character.
- Press NEXT or PREV to move the cursor to the next character.
- Repeat step 2.
- Press SET to record changes.

The second line of the display shows a list of available characters with the current value indicated at the cursor position **(Fig. F.8)**.

Fig F.7


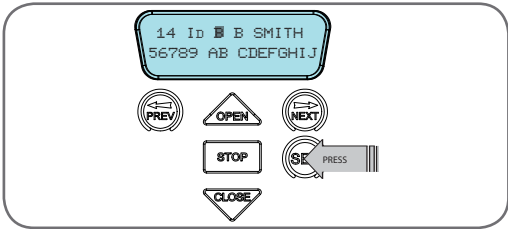


Fig F.8

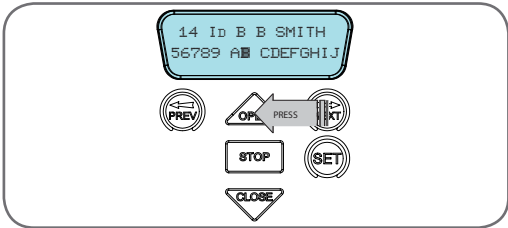

Appendix

G - Transmitter Management

Transmitter Listing Facility

The Axxess® Pro Series 3000 provides a transmitter listing facility which enables the user to find a transmitter location within the memory. Once located a stored transmitter can be replaced, deleted, edited, copied or, if the location is empty, a new transmitter can be coded.

Method 1 - Go To The Start Of The List Accessing The List Menu

- Press NEXT to navigate to Menu 1 (**Fig. G.1**).
- Press SET to enter the transmitter edit procedure.
- Press NEXT to enter the transmitter list and edit mode.

Method 2 - Use The Transmitter To Go Direct To The List Accessing The List Menu

- Press NEXT to navigate to Menu 1 (**Fig. G.1**).
 - Press SET to enter the transmitter edit procedure.
 - Press the transmitter once (**Fig. G.2**).
 - Press NEXT to view the transmitter parameters (**Fig. G.3**).
- This method is used for quick navigation if the transmitter is available.

NOTE: "VIEW" will not be shown if the transmitter is not stored. Once the list is displayed, it can be sorted by stored number, ID Label or Serial Number. Use the NEXT or PREV buttons to select the sorting method.

NOTE: When sorting by ID label or S/N, only stored transmitter locations are displayed.

Navigating The List

- Press the OPEN or CLOSE buttons to navigate through the list (**Fig. G.4**).
- NOTE:** Holding a button down will step through the list faster.
- Press SET to display the menu of available functions.

Selecting An Operation

- Press NEXT or PREV to cycle through the four menu options (**Fig G.5**).
- Press STOP to return to the list. Press SET to execute the menu's operation.

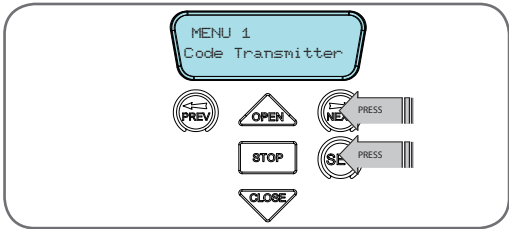


Fig G.1

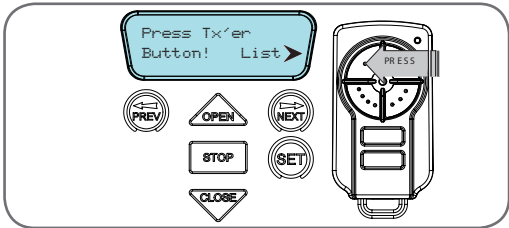


Fig G.2

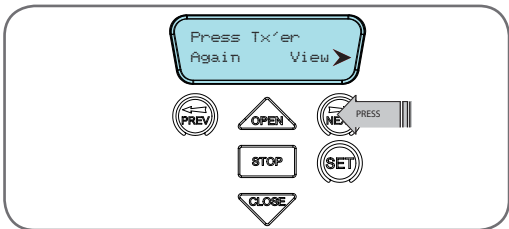


Fig G.3

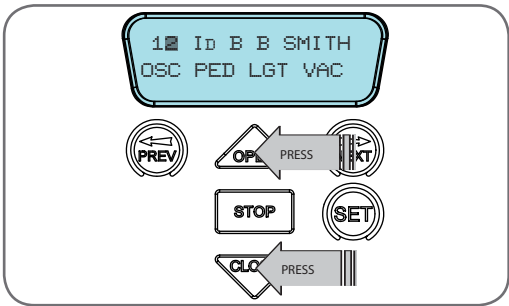


Fig G.4

Menu Option	Operation
Code Operation (location used)	If the code operation is selected for a location that already contains a transmitter, then the storing transmitter code procedure (Section 13.1) will be initiated and the new transmitter will replace the existing one. Note the button functions and name of the existing transmitter will be transferred to the new transmitter. This procedure is of great convenience when replacing a lost transmitter.
Delete Operation	The delete operation is used to remove a transmitter from memory along with the name and button function settings.
Edit Operation	The edit operation displays the transmitter record for editing purposes. See TRANSMITTER EDIT PROCEDURE (Appendix B) for details.
Copy Operation	The copy operation is used to code multiple transmitters with the same button function as that of the selected transmitter. Once selected an abbreviated code set routine is initiated which repeats steps 2 & 3 of the BASIC CODE TRANSMITTER PROCEDURE for each transmitter to be coded. Coding is terminated by pressing the STOP button.
Exiting The List	To exit the transmitter list, simply press STOP to return to the Code menu.

Fig G.5



Warranty and Exclusion of Liability

1. This Warranty is given by Automatic Technology (Australia) Pty Ltd (ABN 11 007 125 368) (ATA). 6-8 Fiveways Boulevard, Keysborough 3173, 1300 133 944, sales@ata-aust.com.au
2. The Competition and Consumer Act 2010 (including the Australian Consumer Law) and other relevant statutes provide a set of statutory consumer guarantees and other legal rights that cannot be excluded, restricted or modified by contract. This Warranty is in addition to and does not affect any of your rights under the Australian Consumer Law and other relevant statutes.
3. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation of any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
4. Subject to your non-excludable rights under the Australian Consumer Law, ATA expressly excludes any liability for consequential loss, incidental or indirect damages (including but not limited to damages for loss of business profits, business interruption and loss of business information) due to a defect of the Axxess® Pro 3000 Series Opener (Product). In particular any loss or damage caused to other equipment or accessories used with the product or any loss resulting from a delay in repair is excluded to extent permitted by law.
5. Subject to all of the matters set out below, ATA warrants in relation to the Product that:
 - a. the Product's drive units will be free of any defects in material and workmanship for:
 - ii. Axxess® Pro Series 3300 Powerheads (3305/3310/3315) - at least 24 months after the date of purchase (as evidenced by the sales docket receipt), or 5000 cycles, whichever occurs first; or,
 - iii. Axxess® Pro Series 3100 Powerheads (3105/3110) - at least 60 months after the date of purchase (as evidenced by the sales docket receipt), or 10000 cycles, whichever occurs first;
 - and;
 - b. the Product's other components and accessories will be free of any defects in material and workmanship for at least 12 months after the date of purchase (as evidenced by the sales docket receipt).
6. No additional warranty will apply for Products repaired during the relevant warranty period.
7. or all Products repaired outside the warranty period, a six (6) month warranty that the Product will be free of any defects in material and workmanship will apply from the date of dispatch of the Product to you. ATA may charge you for any repairs undertaken outside the warranty period, and will provide you with a quotation in relation to any such costs for your approval before proceeding with any repairs.
8. This Warranty applies only where you:
 - a. immediately notify ATA at the contact details provided in paragraph 1 above or notify the or the retailer that you purchased the Product from of the alleged defect;
 - b. return the product to the retailer that you purchased the Product from; and
 - c. present the relevant sales docket and this Warranty document to the retailer to confirm the date of purchase.
9. Except for this Warranty, ATA gives no warranties of any kind whatsoever (whether express or implied), in relation to the product, and, subject to paragraph 1 above, all warranties of whatsoever kind relating to the product are hereby excluded.
10. This Warranty excludes damage resulting from:
 - a. normal wear and tear;
 - b. accidental damage;
 - c. incorrect installation of the Product;
 - d. blown fuses, electrical surges, power surges or power spikes;
 - e. theft, fire, flood, rain, water, lightning, storms or any other acts of God;
 - f. any installation, configuration or use of the Product contrary to the instructions supplied with the Product;
 - g. the surface area or weight of the door used with the Product exceeding the technical specifications supplied with the Product;
 - h. the door used with the Product not being in safe working order and condition;
 - i. repairs which are not authorised by ATA;
 - j. any failure to maintain the Product in accordance with the instructions supplied with the Product;
 - k. deliberate or negligent damage to the Product;
 - l. any unauthorised modification to the Product;
 - m. radio interference; or
 - n. acts or omissions of any person other than ATA.
11. ATA's liability under this Warranty is limited, at ATA's absolute option, to replacing or repairing the product which ATA, in its unfettered opinion, considers to be defective either in material and/or workmanship or to credit the dealer with the price at which the product was purchased by the dealer.
12. This Warranty does not extend to cover labour for installation of the Product following repairs, the cost of which must be borne by you.
13. This Warranty is limited to Return-to-Base (RTB) repair and does not cover labour for on-site attendance, the cost of which must be borne by you.
14. Except as specified in this Warranty, ATA will not charge you for any repairs or replacements conducted under the Warranty. However, ATA will charge you for any repairs which are not within the scope of this Warranty (or which are not required to be undertaken free of charge pursuant to the Australian Consumer Law).
15. This Warranty is void if the Product is not returned to the manufacturer in original or suitably secure packaging.
16. This Warranty is only applicable for repairs to the product carried out within Australia.
17. This Warranty does not cover consumable items including, without limitation, globes, batteries and fuses.
18. This Warranty is not transferable.
19. This Warranty is void if a Photo Electric Beam Sensor is not fitted to the door opening.
20. Where the Product is retailed by any person other than ATA, except for the warranty set out above, such person has no authority from ATA to give any warranty or guarantee on ATA's behalf in addition to the warranty set out above.
21. Any provision of this Warranty that is prohibited or unenforceable in any jurisdiction is ineffective as to that jurisdiction to the extent of the prohibition or unenforceability. That does not invalidate the remaining provisions of this Warranty nor affect the validity or enforceability of that provision in any other jurisdiction.
22. Products presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the Product.

NOTES:

1. One (1) cycle = one (1) open and one (1) close action of the door.
2. This Warranty is to be read in conjunction with the owner's copy of the installation instruction manual.

© February 2014 Automatic Technology (Australia) Pty Ltd. All rights reserved. Axxess® and TrioCode™128, are trademarks of Automatic Technology (Australia) Pty Ltd. No part of this document may be reproduced without prior permission. In an ongoing commitment to product quality we reserve the right to change specification without notice. E&OE.

autOMATIC
TECHNOLOGY

Automatic Technology (Australia) Pty Ltd

ABN 11 007 125 368

6-8 Fiveways Boulevard
Keysborough, Victoria, 3173, Australia

P 1300 133 944

E sales@automatictechnology.com.au

www.automatictechnology.com.au

SMART
SIMPLE
SECURE